

As you are now the owner of this document which should have come to you for free, please consider making a donation of £1 or more for the upkeep of the (Radar) website which holds this document. I give my time for free, but it costs me money to bring this document to you. You can donate here <https://blunham.com/Misc/Texas>

Many thanks.

Please do not upload this copyright pdf document to any other website. Breach of copyright may result in a criminal conviction.

This Acrobat document was generated by me, Colin Hinson, from a document held by me. I requested permission to publish this from Texas Instruments (twice) but received no reply. It is presented here (for free) and this pdf version of the document is my copyright in much the same way as a photograph would be. If you believe the document to be under other copyright, please contact me.

The document should have been downloaded from my website <https://blunham.com/>, or any mirror site named on that site. If you downloaded it from elsewhere, please let me know (particularly if you were charged for it). You can contact me via my Genuki email page: <https://www.genuki.org.uk/big/eng/YKS/various?recipient=colin>

You may not copy the file for onward transmission of the data nor attempt to make monetary gain by the use of these files. If you want someone else to have a copy of the file, point them at the website. (<https://blunham.com/Misc/Texas>). Please do not point them at the file itself as it may move or the site may be updated.

It should be noted that most of the pages are identifiable as having been processed by me.

I put a lot of time into producing these files which is why you are met with this page when you open the file.

If you find missing pages, pages in the wrong order, anything else wrong with the file or simply want to make a comment, please drop me a line (see above).

It is my hope that you find the file of use to you.

Colin Hinson

In the village of Blunham, Bedfordshire.

XDS Breakpoint/ Trace

XDS Extended Development Support
Installation and Operation Guide



Texas Instruments

The information and/or drawings set forth in this document and all rights in and to inventions disclosed herein and patents which might be granted thereon disclosing or employing the materials, methods, techniques, or apparatus described herein are the exclusive property of Texas Instruments.

No disclosure of information or drawings shall be made to any other person or organization without the prior consent of Texas Instruments.

XDS Group
MS 2186
12501 Research Blvd.
Austin, Texas 78759

Part Number: 1603442-9701**
Date: 19 OCTOBER 1983
revised

IMPORTANT NOTICE

Texas Instruments reserves the right to make changes at any time in order to improve design and to supply the best product possible.

Texas Instruments assumes no responsibility for infringement of patents or rights of others based on Texas Instruments applications assistance or product specifications, since TI does not possess full access to data concerning the use or applications of customer's products. TI also assumes no responsibility for customer product designs.

PREFACE

The purpose of this manual is to familiarize the user with the functions and theory of the Breakpoint/Trace board. The Breakpoint/Trace Board is an optional circuit card for the XDS that greatly increases the capabilities of the system. This manual also describes installation instructions for the Breakpoint/Trace board, part numbers 2311045-0001 and 2311045-0002. The user and installer should read this manual before attempting to operate or install the Breakpoint/trace board. If the Breakpoint/Trace board is removed from the XDS, this manual should be kept with the board for reference during future installation.

TABLE of CONTENTS

Paragraph	Title	Page
-----------	-------	------

PREFACE

SECTION 1 INSTALLATION

1.1	INTRODUCTION	1-1
1.1.1	Board Preperation and Installation	1-1
1.1.1.1	Board Configuration	1-1
1.1.2	Board Installation	1-2
1.1.2.1	Extended Trace Cable Installation	1-4
1.1.2.2	Installation Completion	1-4

SECTION 2 HARDWARE FEATURES

2.1	INTRODUCTION	2-1
2.1.1	Status Indicator Lights	2-1
2.1.2	Extended Trace Probe	2-1
2.1.3	Power Requirements	2-1

SECTION 3 THEORY OF OPERATION

3.1	INTRODUCTION	3-1
3.1.1	Break Point Capability	3-1
3.1.2	Tracing Capability	3-1
3.1.3	Block Diagram	3-1

APPENDIX A Breakpoint/Trace Board Schematics

LIST of TABLES

Table	Title	Page
1-1	Breakpoint/Trace Board Configurations	1-2
1-2	Chassis Configuraiton Label Information	1-4
2-1	Extended Trace Probe Color Code	2-2
2-2	Breakpoint/Trace DC Power Requirements	2-2

LIST of FIGURES

Figure	Title	Page
1-1	Breakpoint/Trace Board PN 2311045	1-3
3-1	Breakpoint/trace Board Block Diagram	3-2

SECTION 1

INSTALLATION

1.1 INTRODUCTION

The breakpoint/Trace board is an option that significantly increases the emulation power of the XDS, (Extended Development Support System). Some of this increased performance includes being able to set a breakpoint on any memory access (read or write), breakpoint on an instruction opcode, and breakpoint on any I/O or CRU (Communications Register Unit) access (address and data can be specified). Also, the Breakpoint/Trace board allows the user to trace the execution of a system under test by storing all the necessary information of address and/or data in memory, and then displaying it after stopping at a breakpoint. More information on the use of the breakpoint/trace board is available in the emulator user's guide. Refer to this section if the board is not installed or if it is to be moved. Also refer to this section if you wish to change the board options.

1.1.1 Board Preparation and Installation.

The Breakpoint/Trace board can be configured so that it can support the major portion of the XDS system emulators. When installing the breakpoint/trace board you should check the type of emulator it is being used with to determine if a conversion is required.

1.1.1.1 Board Configuration.

The Breakpoint/Trace board is available in two configurations. Table 1-1 describes which configuration is used with each emulator system. The part number of the breakpoint/trace board determines how the board is configured and which emulators it will support. You should be sure and update the board's part number if the configuration of the board is changed. The board may be field converted from a 2311045-0001 to a 2311045-0002 by changing the 74ALS573 devices in locations U3 through U8 to 74ALS574 devices. Of course a 2311045-0002 may be converted to a 2311045-0001. Table 1-1 describes which devices are used on each configuration of the board. The location of the devices are shown in Figure 1-1 and they are installed in sockets

so no soldering is required.

Table 1-1 Breakpoint/Trace Board Configurations

Part Number	Emulator Type	Device Type Locations U3 - U8
2311045-0001	TMS7000	74ALS573
2311045-0001	TMS9995	74ALS573
2311045-0002	TMS32010	74ALS574
2311045-0002	TMS99000	74ALS574

1.1.2 Board Installation.

CAUTION

BEFORE INSTALLING OR REMOVING ANY BOARD, TURN OFF THE POWER TO THE XDS UNIT.

The XDS Model XX Installation and Operation Guide describes the procedure for installing or removing boards from the XDS unit. Refer to the manual appropriate for the XDS Model you are using. If an breakpoint/trace board is currently installed in the XDS it must be removed before another one can be installed. Only one breakpoint/trace board can be installed at any one time for the XDS to function properly. The breakpoint/trace board must be installed in slot number 1.

Boards removed from the chassis should be stored so that they are protected from static discharge. Erase the board information on the chassis configuration label for each circuit board removed.

For the Breakpoint/Trace board enter the following information on the chassis configuration label for slot number 1 as given in Table 1-2.

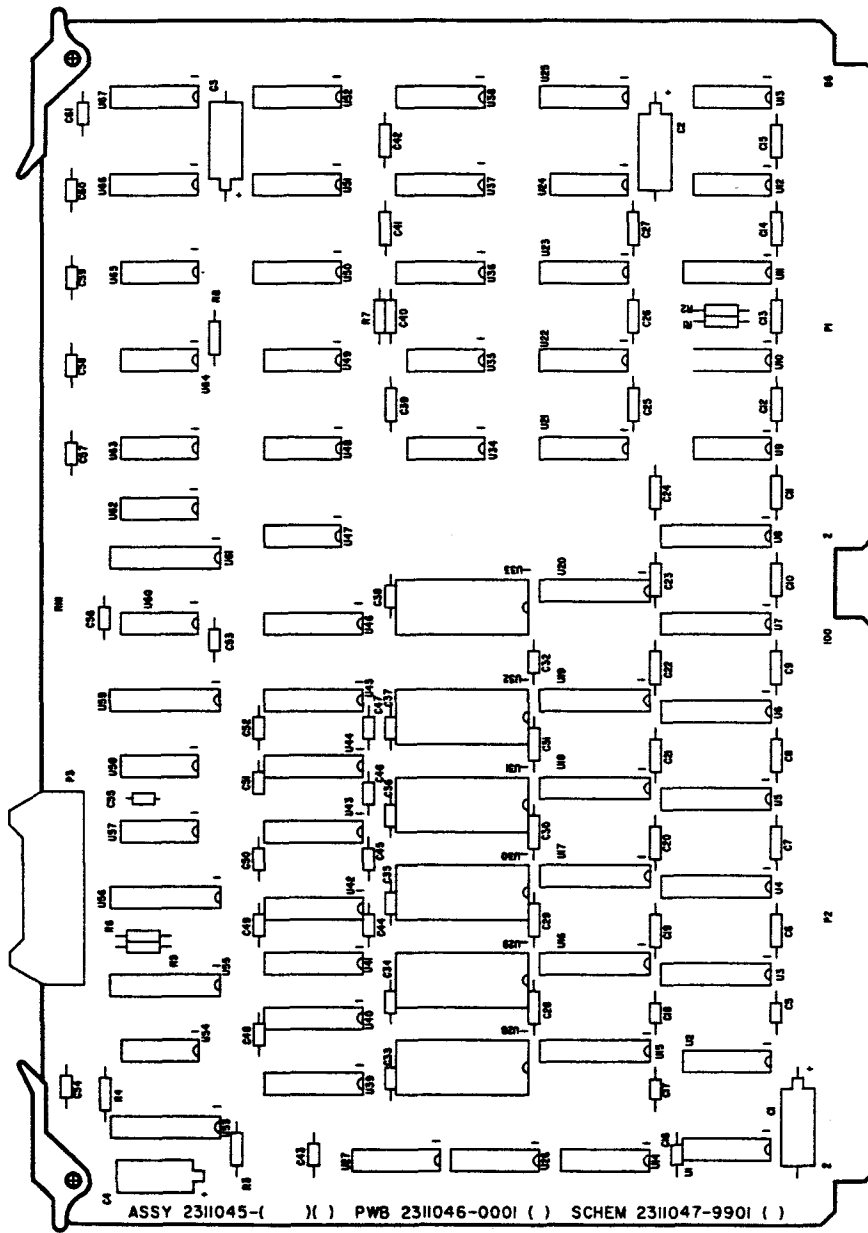


Figure 1-1 Breakpoint/Trace Board PN 2311045

19 OCTOBER 1983

Table 1-2 Chassis Configuraiton Label Information

Block Title	Information to be Entered
PWB Description	BREAKPOINT/TRACE
Part No	2311045-0001 OR 2311045-0002
REV	ENTER REVISION LETTER FROM BREAKPOINT/TRACE BOARD.

1.1.2.1 Extended Trace Cable Installation.

To complete the installation of the breakpoint/trace board the extended trace cable (PN 2232136-0001 must be installed. This cable plugs into the board via connector P3 on the edge of the board. Refer to Figure 1-1 for the location of P3. Note that the extended trace cable is held in place by the target cable clamp and that this clamp must be removed before installing or removing the breakpoint/trace board. When the extended trace cable has been installed, restore the target cable clamp to its position to secure the extended trace cable. Refer to the appropriate XDS installation and operation manual for instructions on installing the target cable clamp.

The extended trace cable has an extended trace probe (PN 2232139-0001) which plugs on to the end of the cable. This probe may be connected or disconnected at any time during an operating session. You may find it desirable to disconnect the probe when it is not in use or to move the target system. When the Probe is disconnected it should be kept in a safe place.

1.1.2.2 Installation Completion.

Complete the installation according to the information in the appropriate XDS installation and operation Guide.

CAUTION

DO NOT OPERATE THE XDS UNIT WITH THE FRONT PANEL REMOVED. THE FRONT PANEL IS REQUIRED FOR PROPER AIR CIRCULATION AND COOLING OF THE CIRCUIT BOARDS. THE FRONT PANEL IS ALSO REQUIRED TO PREVENT LEAKAGE OF RFI/EMI RADIATION.

Restore power to the XDS unit. Refer to the appropriate emulator user's guide for further instructions on operating the XDS.

SECTION 2

HARDWARE FEATURES

2.1 INTRODUCTION

The breakpoint/trace board operates primarily with the emulator software that is referenced in the appropriate emulator user's guide. Also the features and applications of the extended trace cable are discussed in the emulators user's guide. The status lights and power requirements are discussed below for the breakpoint/trace board.

2.1.1 Status Indicator Lights.

The XDS has four status indicator lights that are located on the front panel of the XDS. The Breakpoint/Trace board is required for status light number one to function. The meaning of this light may differ for different emulators but the breakpoint/trace board controls it. If the breakpoint/trace board is not installed this light will not operate.

2.1.2 Extended Trace Probe.

The extended trace probe is color coded to enable you to keep track of each line. Table 2-1 relates the color code to data bit numbers.

2.1.3 Power Requirements.

The DC power requirements for the Breakpoint/Trace board are given in Table 2-2. This information may be used to calculate the total DC power requirements of the XDS system. When adding new boards to the system this DC Power calculation should be made to ensure that the XDS power supply will not be overloaded. Refer to the XDS Installation and Operation Manual for the power supply rating information, and the power requirements for the other circuit boards may be obtained from their appropriate reference manuals.

Table 2-1 Extended Trace Probe Color Code

Data Bit	Number	Color of Line
MSB	7	Violet
	6	Blue
	5	Green
	4	Yellow
	3	Orange
	2	Red
	1	Brown
LSB	0	Black
Ground		White

Table 2-2 Breakpoint/Trace DC Power Requirements

+ 5 VOLTS (AMPS)	+ 12 VOLTS (AMPS)	- 12 VOLTS (AMPS)
2.00	0	0

SECTION 3

THEORY OF OPERATION

3.1 INTRODUCTION

The breakpoint/trace board can be separated into two basic sections: Break Point capability, and Tracing capability. This section will briefly discuss these capabilities and show a block diagram of the breakpoint/trace board.

3.1.1 Break Point Capability.

A break point is a hardware interrupt which causes emulator control to be passed back to the user, and is used to stop the emulator when it has been put into execution mode. You must set up the breakpoint options before executing a program. On power up the emulators disables the breakpoint/trace board until the user issues a breakpoint or trace command to initialize the breakpoint/trace board.


3.1.2 Tracing Capability.

The trace capability provides a record of the machine cycles that occurred during the execution of a program. Each machine cycle, when it qualifies is stored in the trace buffer so that it can be recalled for examination at a later time.

3.1.3 Block Diagram.

Figure 3-1 shows a block diagram of the breakpoint trace board. The major blocks are the trace memory and the data bus.

19 OCTOBER 1983
 Figure 3-1 Breakpoint/trace Board Block Diagram
 3-2

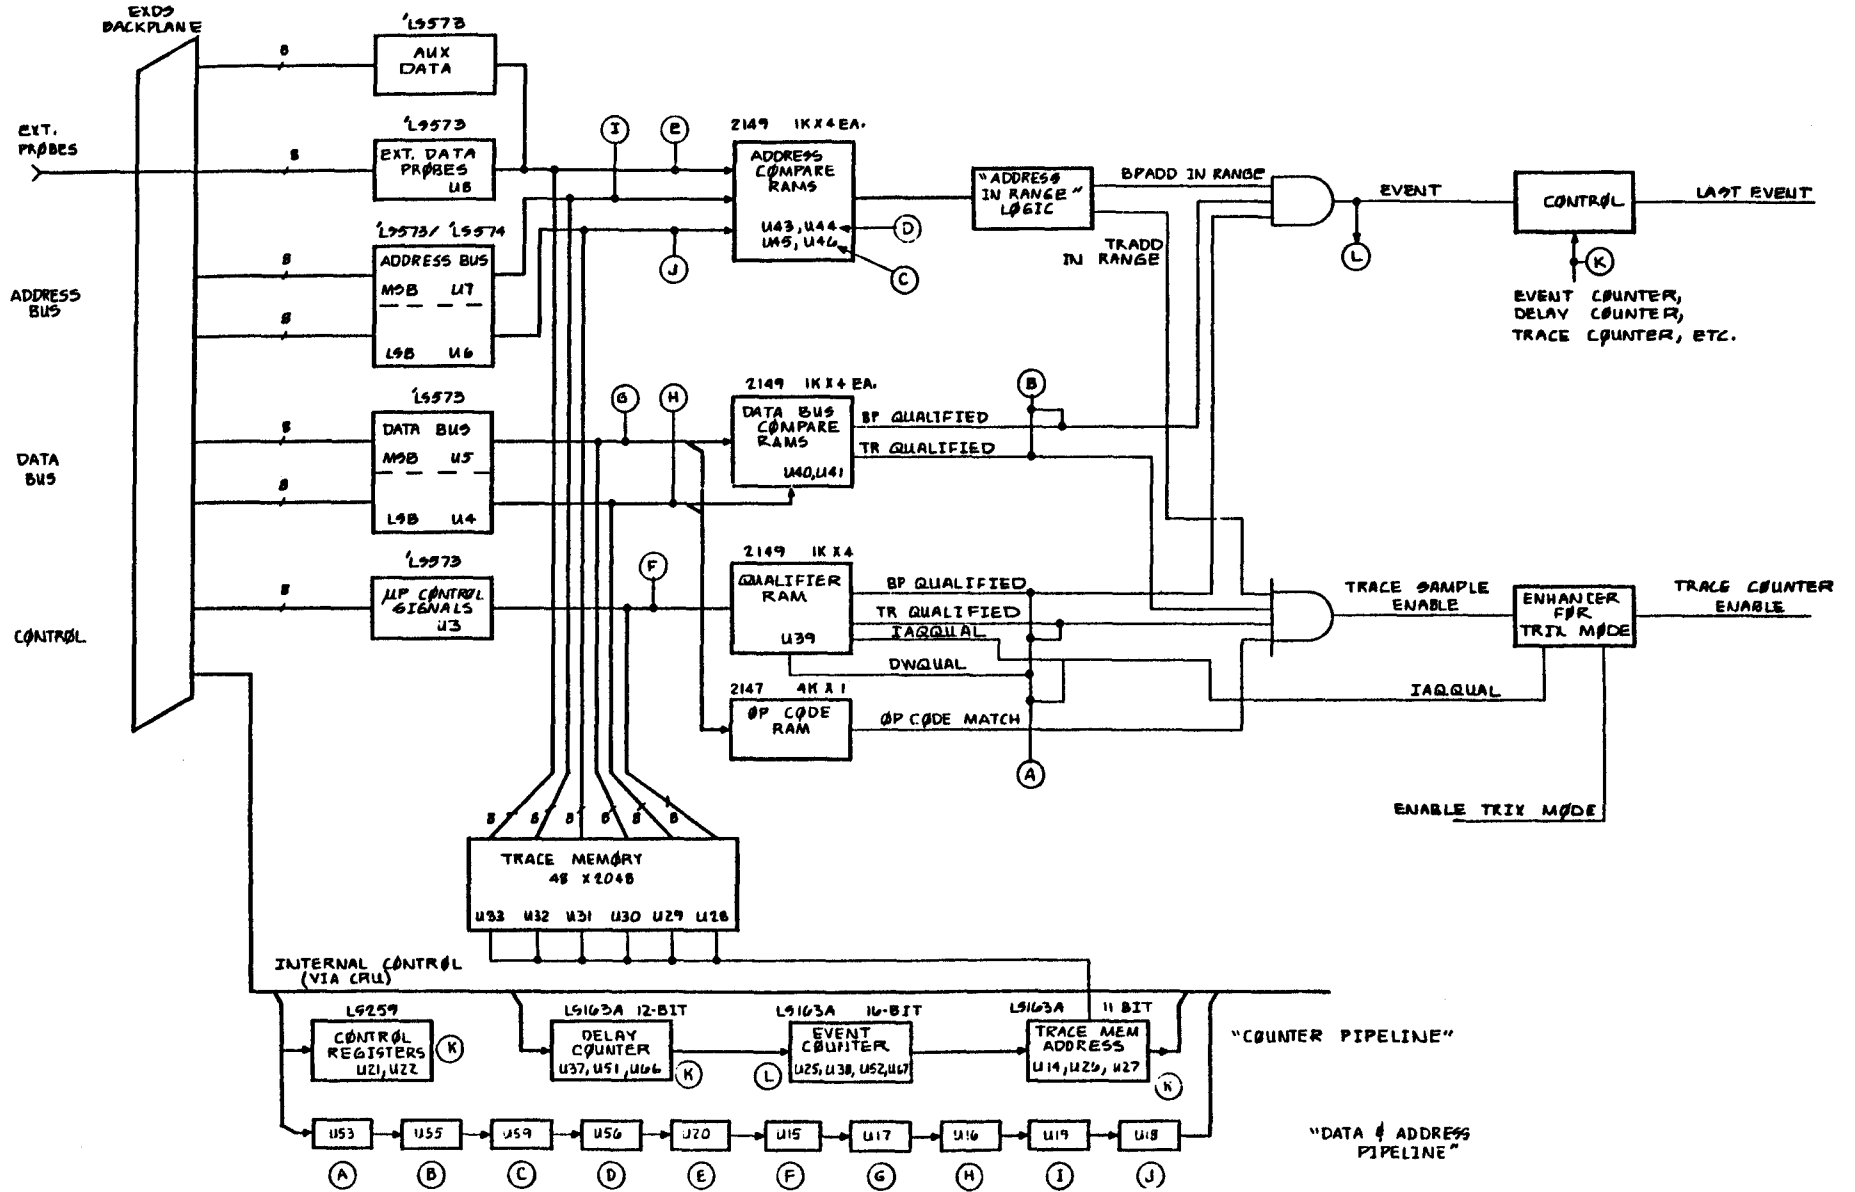

APPENDIX A

Breakpoint/Trace Board Schematics

19 OCTOBER 1983

A-1

REVISONS			
REV	DESCRIPTION	DATE	APPROVED

- NOTES: UNLESS OTHERWISE SPECIFIED:
1. ALL DEVICE TYPES ARE PREFIXED WITH SN74.
 2. VCC IS APPLIED TO PIN 8 OF ALL 8-PIN IC'S, PIN 14 OF ALL 14-PIN IC'S, PIN 16 OF ALL 16-PIN IC'S, PIN 20 OF ALL 20-PIN IC'S, ETC.
 3. GROUND IS APPLIED TO PIN 4 OF ALL 8-PIN IC'S, PIN 7 OF ALL 14-PIN IC'S, PIN 8 OF ALL 16-PIN IC'S, PIN 10 OF ALL 20-PIN IC'S, ETC.
 4. DEVICE TYPE, PIN NUMBERS, AND REFERENCE DESIGNATOR OF IC IS SHOWN AS FOLLOWS:



- U2
LS00 AND LS04 = DEVICE TYPE
1, 2, AND 3 = PIN NUMBERS
U2 AND U14 = REFERENCE DESIGNATOR
5. RESISTANCE VALUES ARE IN OHMS.
 6. RESISTORS ARE 1/4 WATT, 5%.
 7. CAPACITANCE VALUES ARE IN MICROFARADS.
 8. U1, U2, U10 AND U11 ARE OPEN IC LOCATIONS.
 9. MSB / LSB DEFINITIONS:
A00 = MSB D000 = MSB
A15 = LSB D015 = LSB

QTY	QTY	QTY	REV NO	PART OR IDENTIFYING NUMBER	NOMENCLATURE OR DESCRIPTION	NOTES	
2311045				7119	<p>UNLESS OTHERWISE SPECIFIED:</p> <ul style="list-style-type: none"> • DIMENSIONS ARE IN MILLIMETERS • TOLERANCES: PLACE DIMENSIONAL ± 0.25 • PLACE DIMENSIONAL ± 0.1, UNLESS ± 0.1 • SURFACES UNLESS OTHERWISE SPECIFIED • REMOVE ALL BURRS AND SHARP EDGES • CONDUCTIVITY MEASUREMENTS: 2.00 PM • DIMENSIONAL LIMITS APPLY BEFORE PROCESSING • PARALLELISM: 0.050 PER REF ONLY 	<p>DATE: 1-3-83 BY: C. KEELER</p> <p>DATE: 4-9-83 BY: C. KEELER</p> <p>DATE: 7-6-83 BY: [Signature]</p> <p>DATE: 7-8-83 BY: [Signature]</p> <p>DATE: 7-8-83 BY: [Signature]</p>	<p>TEXAS INSTRUMENTS INCORPORATED</p> <p>SI-METRIC</p> <p>LOGIC DIAGRAM, B/T CARD</p>
2311045				7119	<p>0.25 THRU 2.50 ±0.10-0.05</p> <p>2.50 THRU 5.00 ±0.20-0.10</p> <p>5.00 THRU 12.50 ±0.30-0.15</p> <p>12.50 THRU 25.00 ±0.50-0.25</p> <p>25.00 THRU 50.00 ±0.75-0.30</p> <p>50.00 THRU 100.00 ±1.00-0.40</p>	<p>DATE: 1-3-83 BY: C. KEELER</p> <p>DATE: 4-9-83 BY: C. KEELER</p> <p>DATE: 7-6-83 BY: [Signature]</p> <p>DATE: 7-8-83 BY: [Signature]</p> <p>DATE: 7-8-83 BY: [Signature]</p>	<p>TEXAS INSTRUMENTS INCORPORATED</p> <p>SI-METRIC</p> <p>LOGIC DIAGRAM, B/T CARD</p>
2311045				7119	<p>0.25 THRU 2.50 ±0.10-0.05</p> <p>2.50 THRU 5.00 ±0.20-0.10</p> <p>5.00 THRU 12.50 ±0.30-0.15</p> <p>12.50 THRU 25.00 ±0.50-0.25</p> <p>25.00 THRU 50.00 ±0.75-0.30</p> <p>50.00 THRU 100.00 ±1.00-0.40</p>	<p>DATE: 1-3-83 BY: C. KEELER</p> <p>DATE: 4-9-83 BY: C. KEELER</p> <p>DATE: 7-6-83 BY: [Signature]</p> <p>DATE: 7-8-83 BY: [Signature]</p> <p>DATE: 7-8-83 BY: [Signature]</p>	<p>TEXAS INSTRUMENTS INCORPORATED</p> <p>SI-METRIC</p> <p>LOGIC DIAGRAM, B/T CARD</p>

REV NO	IDENT	QTY	NO	ADDITIONAL	NOTES	REV STATUS	REV	REV	REV	REV	REV	REV	REV	REV	REV	REV	REV	REV	REV

