

Please do not upload this copyright pdf document to any other website. Breach of copyright may result in a criminal conviction.

This Acrobat document was generated by me, Colin Hinson, from a document held by me. I requested permission to publish this from Texas Instruments (twice) but received no reply. It is presented here (for free) and this pdf version of the document is my copyright in much the same way as a photograph would be. If you believe the document to be under other copyright, please contact me.

The document should have been downloaded from my website <https://blunham.com/Radar>, or any mirror site named on that site. If you downloaded it from elsewhere, please let me know (particularly if you were charged for it). You can contact me via my Genuki email page: <https://www.genuki.org.uk/big/eng/YKS/various?recipient=colin>

You may not copy the file for onward transmission of the data nor attempt to make monetary gain by the use of these files. If you want someone else to have a copy of the file, point them at the website. (<https://blunham.com/Radar>). Please do not point them at the file itself as it may move or the site may be updated.

It should be noted that most of the pages are identifiable as having been processed by me.

I put a lot of time into producing these files which is why you are met with this page when you open the file.


In order to generate this file, I need to scan the pages, split the double pages and remove any edge marks such as punch holes, clean up the pages, set the relevant pages to be all the same size and alignment. I then run Omnipage (OCR) to generate the searchable text and then generate the pdf file.

Hopefully after all that, I end up with a presentable file. If you find missing pages, pages in the wrong order, anything else wrong with the file or simply want to make a comment, please drop me a line (see above).

It is my hope that you find the file of use to you personally – I know that I would have liked to have found some of these files years ago – they would have saved me a lot of time !


Colin Hinson

In the village of Blunham, Bedfordshire.

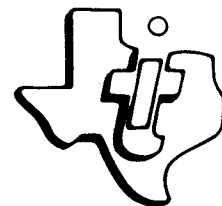

TM 990/518
DC POWER SUPPLY

JULY 1979

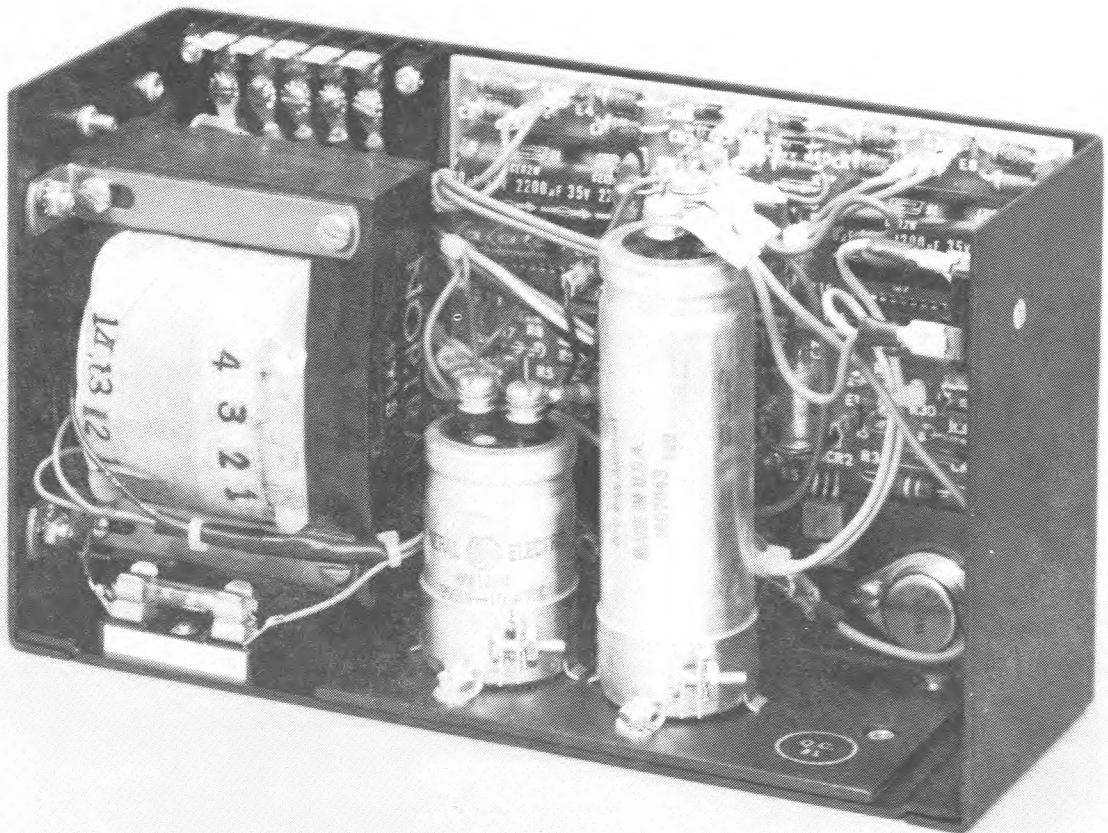

TM 990/518
DC POWER SUPPLY

1. GENERAL

The TM 990/518 Power Supply has the following features:

- DC power outputs of +12 V (0.9 A), -12 V (0.9 A), +5 V (6.0 A), and +45 V (0.1 A).
- Input voltages of either 115 Vac or 230 Vac with proper connections to transformer terminals; frequency of 47 to 63 Hz.
- Overvoltage on + 5 V only. Current limiting on + 5 V and \pm 12 V.
- The power supply rating is specified at +40 degrees C (+104 degrees F) ambient air (at supply), derating linearly to +65 degrees C (+149 degrees F).

CAUTION

The TM 990/518 power supply is an open-frame OEM power supply which is intended to be used in a user-supplied enclosure, with appropriate cooling, and with an external line fuse and ac power switch. It is important that an enclosure be employed which will prevent accidental contact with power supply components as dangerous voltages (120 Vac) can appear on power supply components.
supply components.

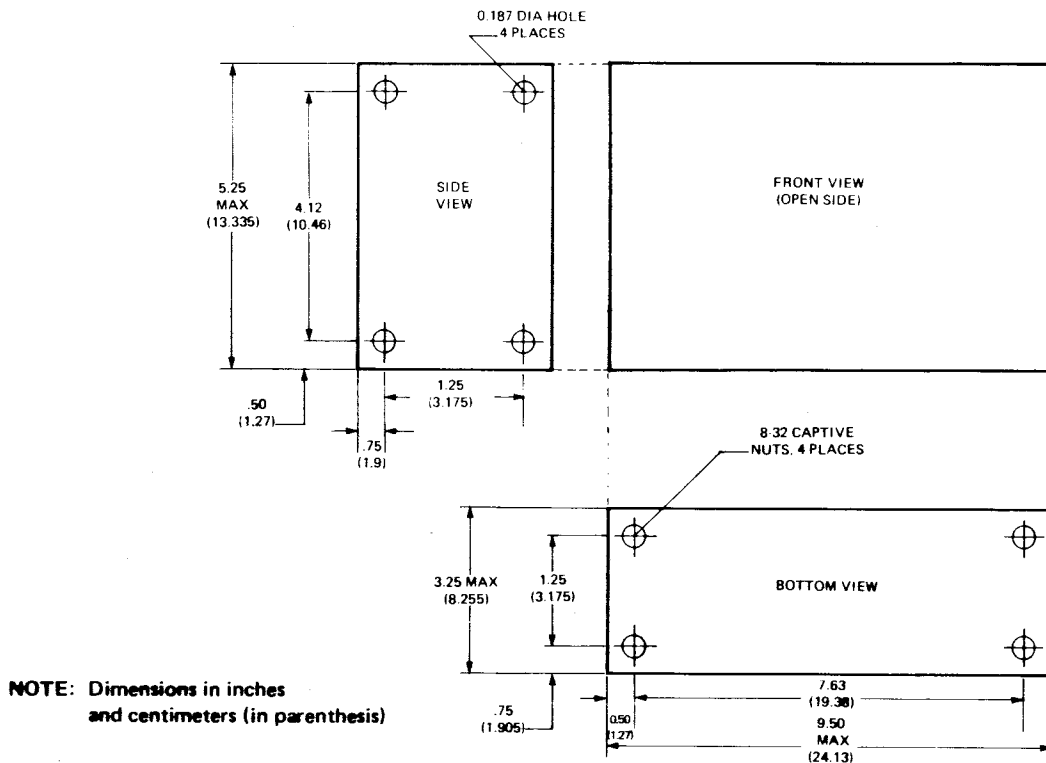


FIGURE 1. MOUNTING DIMENSIONS (IN INCHES)

2. INSTALLATION

Mounting hole dimensions are shown in Figure 1. Connect line voltages to the transformer input terminals as shown in Figures 2 and 3. Line voltages attach to the outside transformer terminals 1 and 4. Jumpers are attached as shown:

- Transformer jumpers for 115 Vac line are shown in Figure 2.
- Transformer jumpers for 230 Vac line voltage are shown in Figure 3.

Note that 115 Vac operation connects the two primary windings in parallel while 230 Vac operation ties the primary windings in series.

CAUTION

1. Check primary connections with Figures 2 and 3 before applying power.
2. Do not attach output voltages to equipment before checking output voltages between output terminal taps and the common output tap. Voltages should be ± 3 percent for all voltages except 45 Vdc which is ± 15 percent. Voltages are shown in Figure 4 and on the back of the power supply chassis.

After checking connections and output voltages, remove power. Attach output voltages as shown in Figure 4 (this figure shows connections for a TM

990/510/520 chassis). Use an enclosure that will prevent accidental contact with power supply voltages (voltages as high as line voltage are present).

3. SPECIFICATIONS

- Input power: 115 Vac and 230 Vac, \pm 10 percent
- Efficiency, minimum : 25 percent
- Outputs: No. 1: +5 Vdc, 6 A, \pm 3 percent line plus load regulation
No. 2: +12 Vdc, 0.9 A, \pm 3 percent line plus load regulation
No. 3: -12 Vdc, 0.9 A, \pm 3 percent line plus load regulation
No. 4: +45 Vdc, 0.1 A, \pm 15 percent line plus load regulation
- +45 V transformer output protected with 0.25 A fuse (3AG, F101)
- Ripple and noise: Outputs 1, 2, 3: 20 mV peak-to-peak max.
Output 4: 1.0 V peak-to-peak
- Overshoot: Zero on turnon and turnoff, or as the result of a power failure.

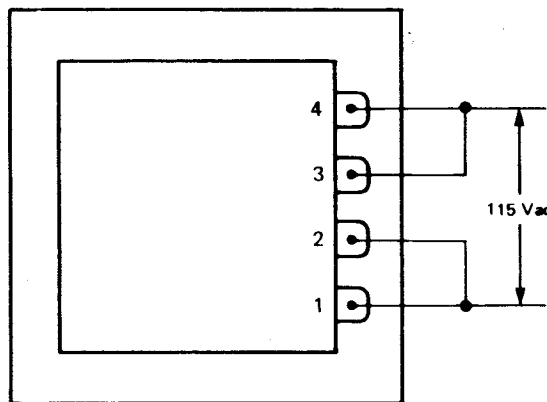


FIGURE 2. TRANSFORMER CONNECTIONS FOR 115 VAC OPERATION

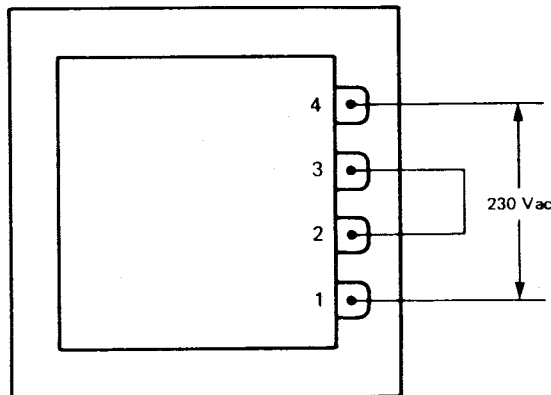


FIGURE 3. TRANSFORMER CONNECTIONS FOR 230 VAC OPERATION

- Overload protection provided on outputs 1, 2, and 3 (current limiting); output 4 fuse protected.
- Nonstandard voltage: Operation at reduced ac input voltage of 90 Vac with maximum output current of 50 percent of normal operating current.
- All input/output terminations are 1/4 inch Faston terminals.

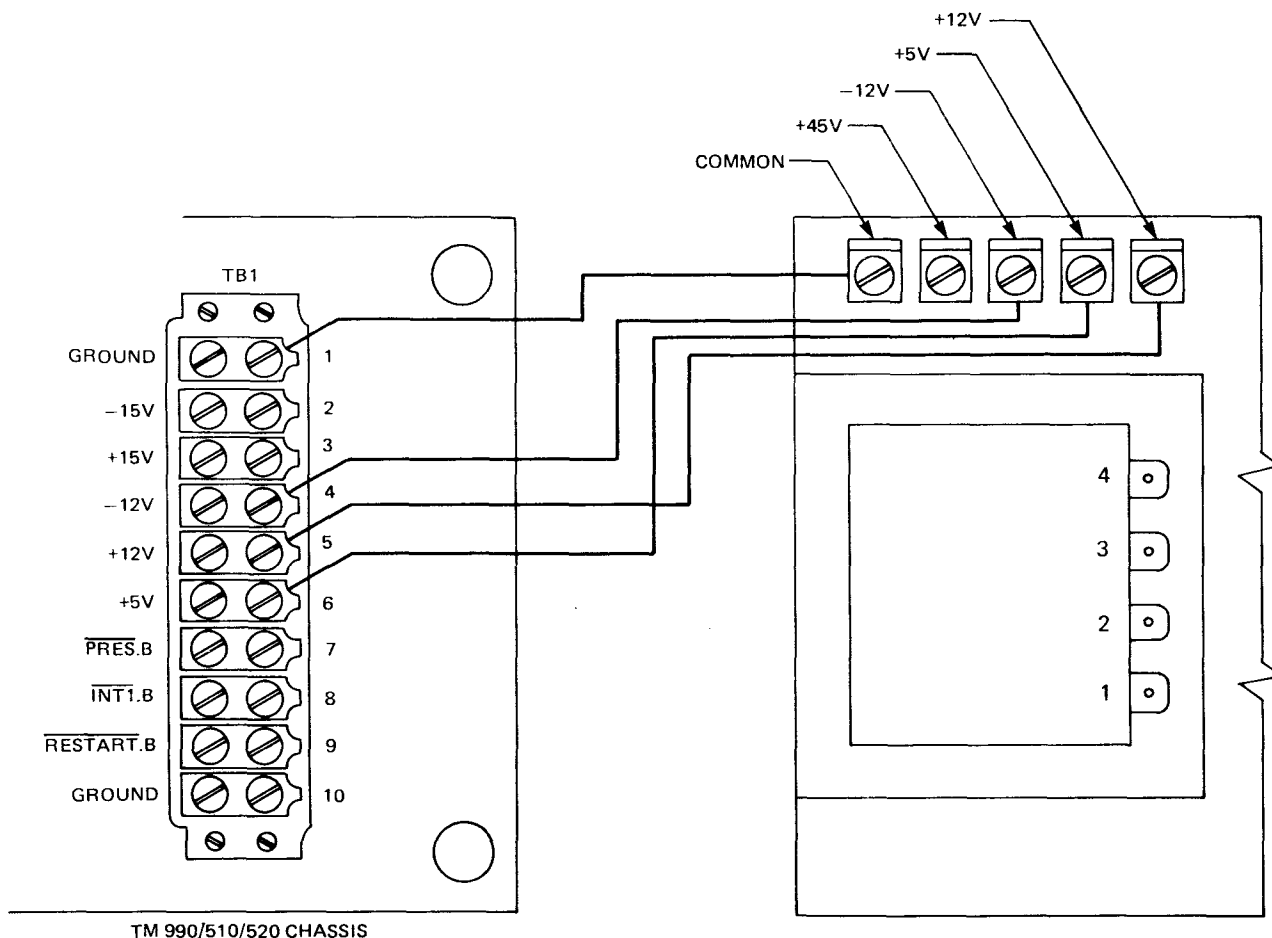


FIGURE 4. OUTPUT CONNECTED TO TM 990/510/520 CHASSIS

CAUTION

1. The power supply does not include fusing in the primary circuit. The user should provide a 1.0 A external fuse for 115 Vac operation, or a 0.5 A external fuse for 230 Vac operation, in order to maintain proper protection.

2. The +45 Vdc output is protected by a 0.25 A 3AG fuse (F101) mounted on the power supply. Replace only with the same type and rating fuse.