

As you are now the owner of this document which should have come to you for free, please consider making a donation of £1 or more for the upkeep of the (Radar) website which holds this document. I give my time for free, but it costs me around £300 a year to bring this document to you. You can donate here <https://blunham.com/Radar>, thank you.

Do not upload this copyright pdf document to any other website. Breaching copyright may result in a criminal conviction and large payment for Royalties.

This document was generated by me, Colin Hinson, from a document held at R.A.F. Henlow Signals Museum which is believed to be out of copyright or Crown Copyright. It is presented here (for free) under the Open Government Licence (O.G.L.) if under Crown Copyright and this version of the document is my copyright (along with the Crown Copyright) in much the same way as a photograph would be. It should be noted that most of the pages are identifiable as having been processed by me. If you believe the original document to be under copyright, please contact me.

The document should have been downloaded from my website <https://blunham.com/Radar>, or any mirror site named on that site. If you downloaded it from elsewhere, please let me know (particularly if you were charged for it). You can contact me via my Genuki email page: <https://www.genuki.org.uk/big/eng/YKS/various?recipient=colin>

You may not copy the file for onward transmission of the data nor attempt to make monetary gain by the use of these files. If you want someone else to have a copy of the file, point them at the website (<https://blunham.com/Radar>). Please do not point them at the file itself as it may move or the site may be updated.

I put a lot of time into producing these files which is why you are met with this page when you open the file.

In order to generate this file, I need to scan the pages, split the double pages and remove any edge marks such as punch holes, clean up the pages, set the relevant pages to be all the same size and alignment. I then run Omnipage (OCR) to generate the searchable text and then generate the pdf file.

Hopefully after all that, I end up with a presentable file. If you find missing pages, pages in the wrong order, anything else wrong with the file or simply want to make a comment, please drop me a line (see above).

If you find the file(s) of use to you, you might like to make a donation for the upkeep of the website – see <https://blunham.com/Radar> for a link to do so.

Colin Hinson

In the village of Blunham, Bedfordshire, UK.

Instruction Manual



**P6006
PROBE**

Copyright © 1963 by Tektronix, Inc.,
Beaverton, Oregon. Printed in the United
States of America. All rights reserved.
Contents of this publication may not be
reproduced in any form without permission
of the copyright owner.

070-0381-00

863

Tektronix, Inc.

S.W. Millikan Way ● P. O. Box 500 ● Beaverton, Oregon 97005 ● Phone 644-0161 ● Cables: Tektronix




WARRANTY

All Tektronix instruments are warranted against defective materials and workmanship for one year. Tektronix transformers, manufactured in our own plant, are warranted for the life of the instrument.

Any questions with respect to the warranty mentioned above should be taken up with your Tektronix Field Engineer.

Tektronix repair and replacement-part service is geared directly to the field, therefore all requests for repairs and replacement parts should be directed to the Tektronix Field Office or Representative in your area. This procedure will assure you the fastest possible service. Please include the instrument Type and Serial number with all requests for parts or service.

Specifications and price change privileges reserved.

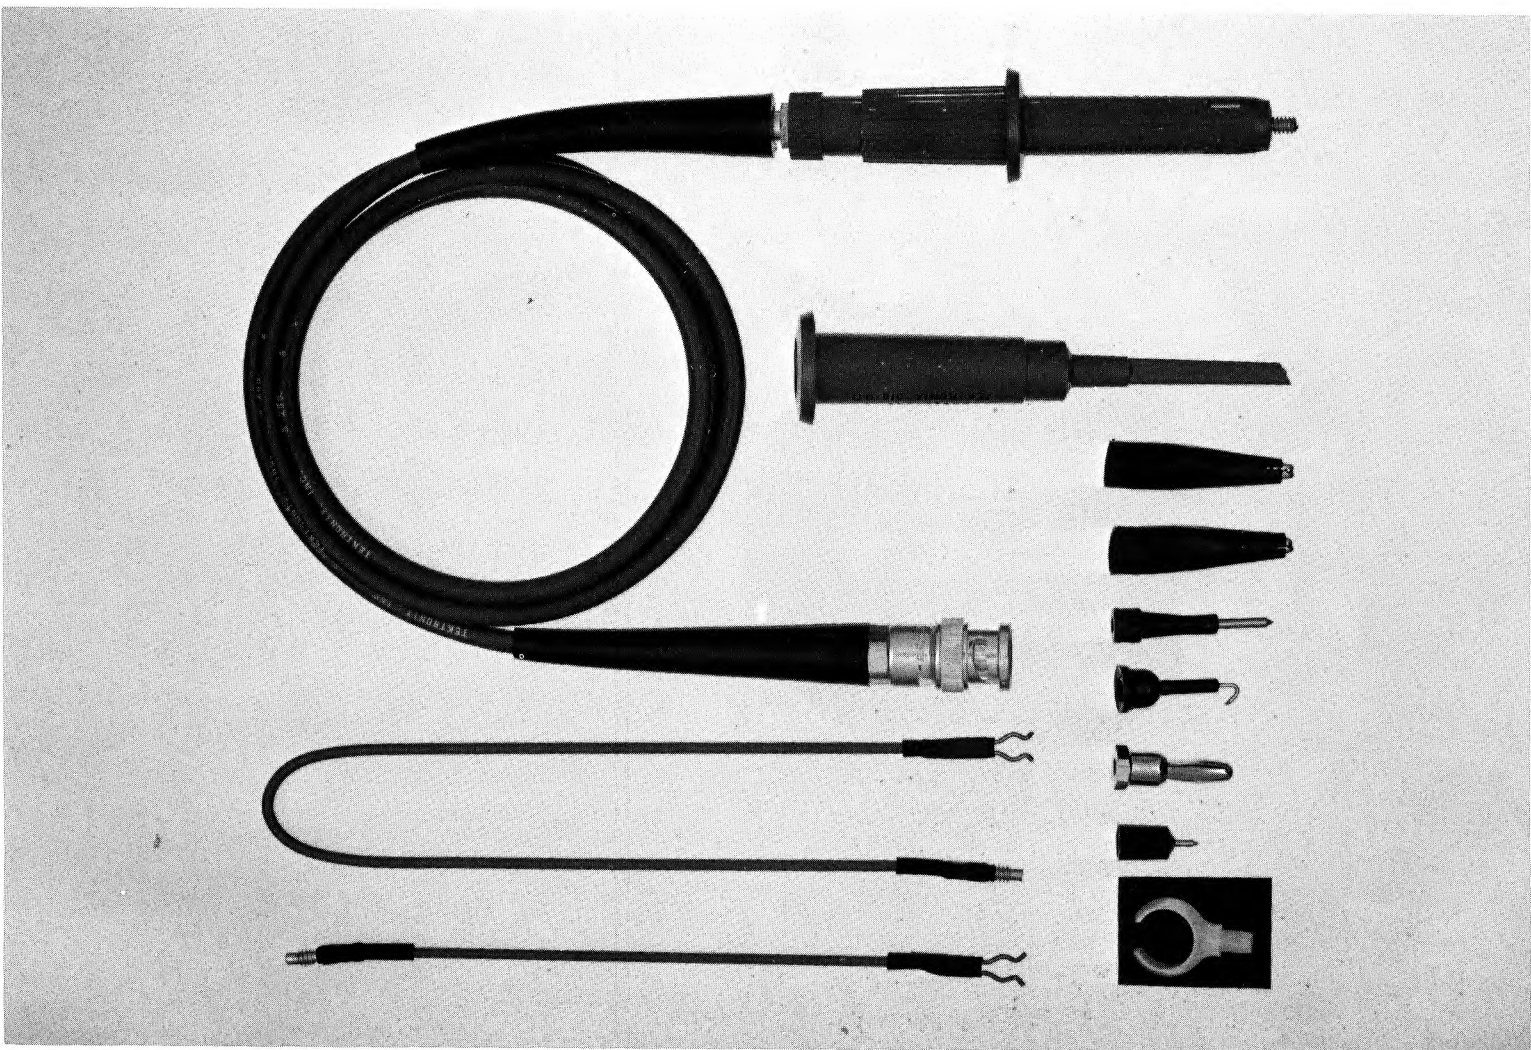

P6006 Probe

P6006 PROBE

Introduction

The P6006 Probe is a passive probe with 10X attenuation, designed for oscilloscopes having an input resistance of 1 megohm and input capacitance of up to 55 picofarads (pf). The probe decreases resistive and capacitive loading on the circuit under test.

Characteristics

Attenuation Factor 10X, $\pm 3\%$

*Input Resistance 10 megohms, $\pm 2\%$

Probe Resistance 9 megohms, $\pm 2\%$

*Input Capacitance }
Risetime } See Table 1

Maximum Voltage Rating 600 vdc or 600 vac peak-to-peak or 600 v peak and dc

*See the input R_p and X_p vs frequency curves.

Cable Length

combined. Maximum voltage must be derated at higher frequencies; see "Derating Curves".

Nominally 3.5', 6', 9', or 12' measured between the bases of the cable strain reliefs.

Environmental Capacitance

The 9-megohm resistor has been factory installed for best transient response. To replace the 9-megohm resistor, a new probe body must be ordered through your local Tektronix Field Office.

Operating Temperature

The probe will operate normally at temperatures up to 75° C.

TABLE 1

Cable Length	Input Capacitance With		Risetime	
	20 pf Plug-In	47 pf Plug-In	Probe Alone	With 540-Series Oscilloscope and K Unit
3.5 ft	≈ 7.5 pf	≈ 9.5 pf	≈ 5 nsec	≈ 13 nsec
6 ft	≈ 8.5 pf	≈ 11 pf	≈ 7 nsec	≈ 14 nsec
9 ft	≈ 11 pf	≈ 13.5 pf	≈ 7 nsec	≈ 14 nsec
12 ft	≈ 13 pf	≈ 15.5 pf	≈ 14 nsec	≈ 18 nsec

Compensation

The P6006 Probe should be compensated each time it is transferred from one oscilloscope or plug-in unit to another. This will ensure accurate attenuation of transient and sine-wave signals.

To compensate the probe, touch the probe tip to the oscilloscope calibrator output connector and display several cycles of the signal. Loosen the flanged locking sleeve several turns. See Fig. 1(a). Adjust for the correct waveform by

turning the probe body and tip assembly while holding the knurled section at the base of the probe. Fig. 1 (b) shows waveforms for a line-frequency oscilloscope calibrator, and Fig. 1 (c) shows waveforms for a 1-kc oscilloscope calibrator. After obtaining the correct waveform, hold the probe body and tip assembly and carefully tighten the locking sleeve. Make the final adjustment by holding the locking sleeve and probe body while turning the probe base.

Derating Curves

The derating curves show the maximum continuous-wave voltages that can be applied to the P6006 Probe at higher frequencies. To observe pulses with a given duty cycle and repetition rate, use the following information to determine the maximum peak voltage of the probe.

Maximum applied voltage at a particular frequency, E:

$$E = \frac{\text{Voltage from curve at CW frequency}}{\sqrt{\text{Duty Factor}}}$$

where: $\text{Duty Factor} = \frac{\text{pulse duration}}{\text{pulse period}}$

For pulse durations longer than 1 second, consider the signal as dc.

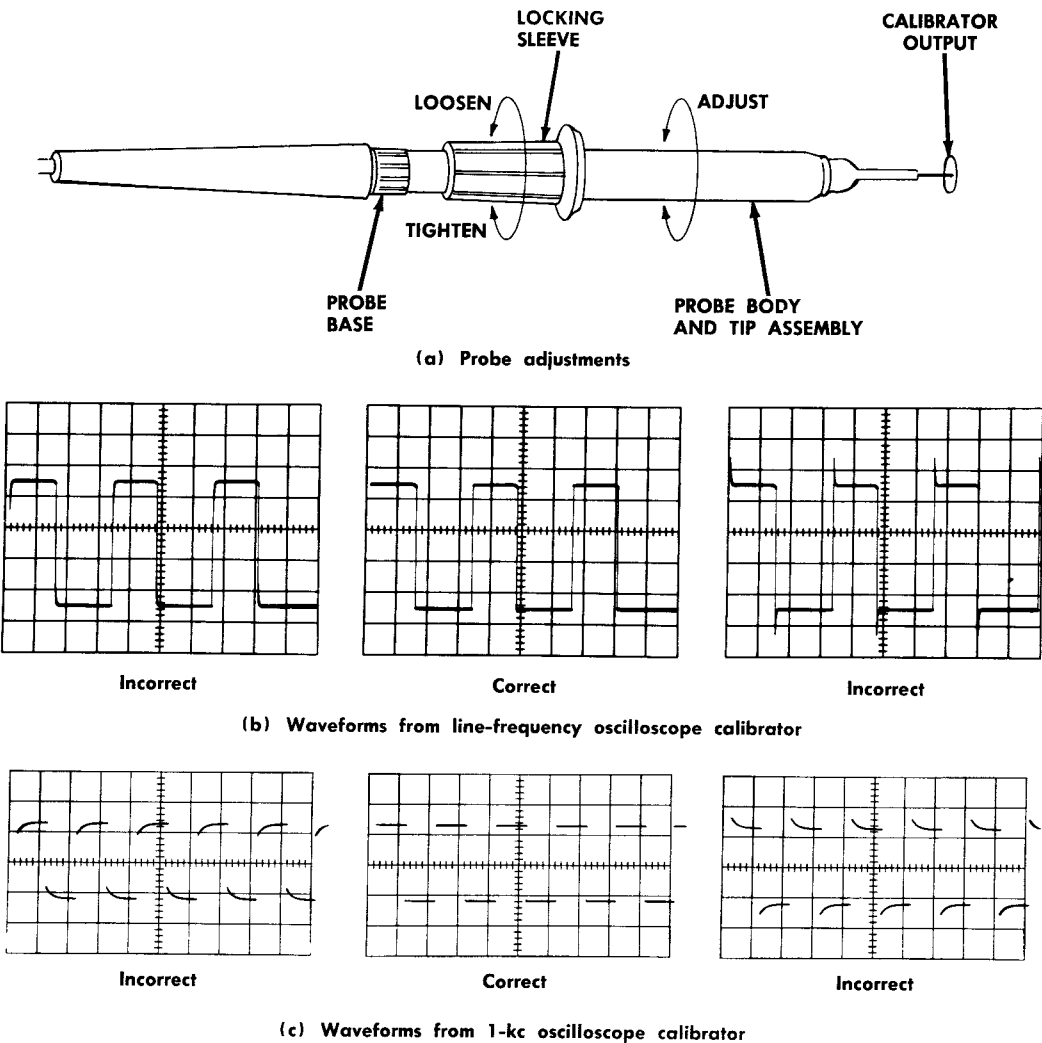


Fig. 1. Probe compensation.

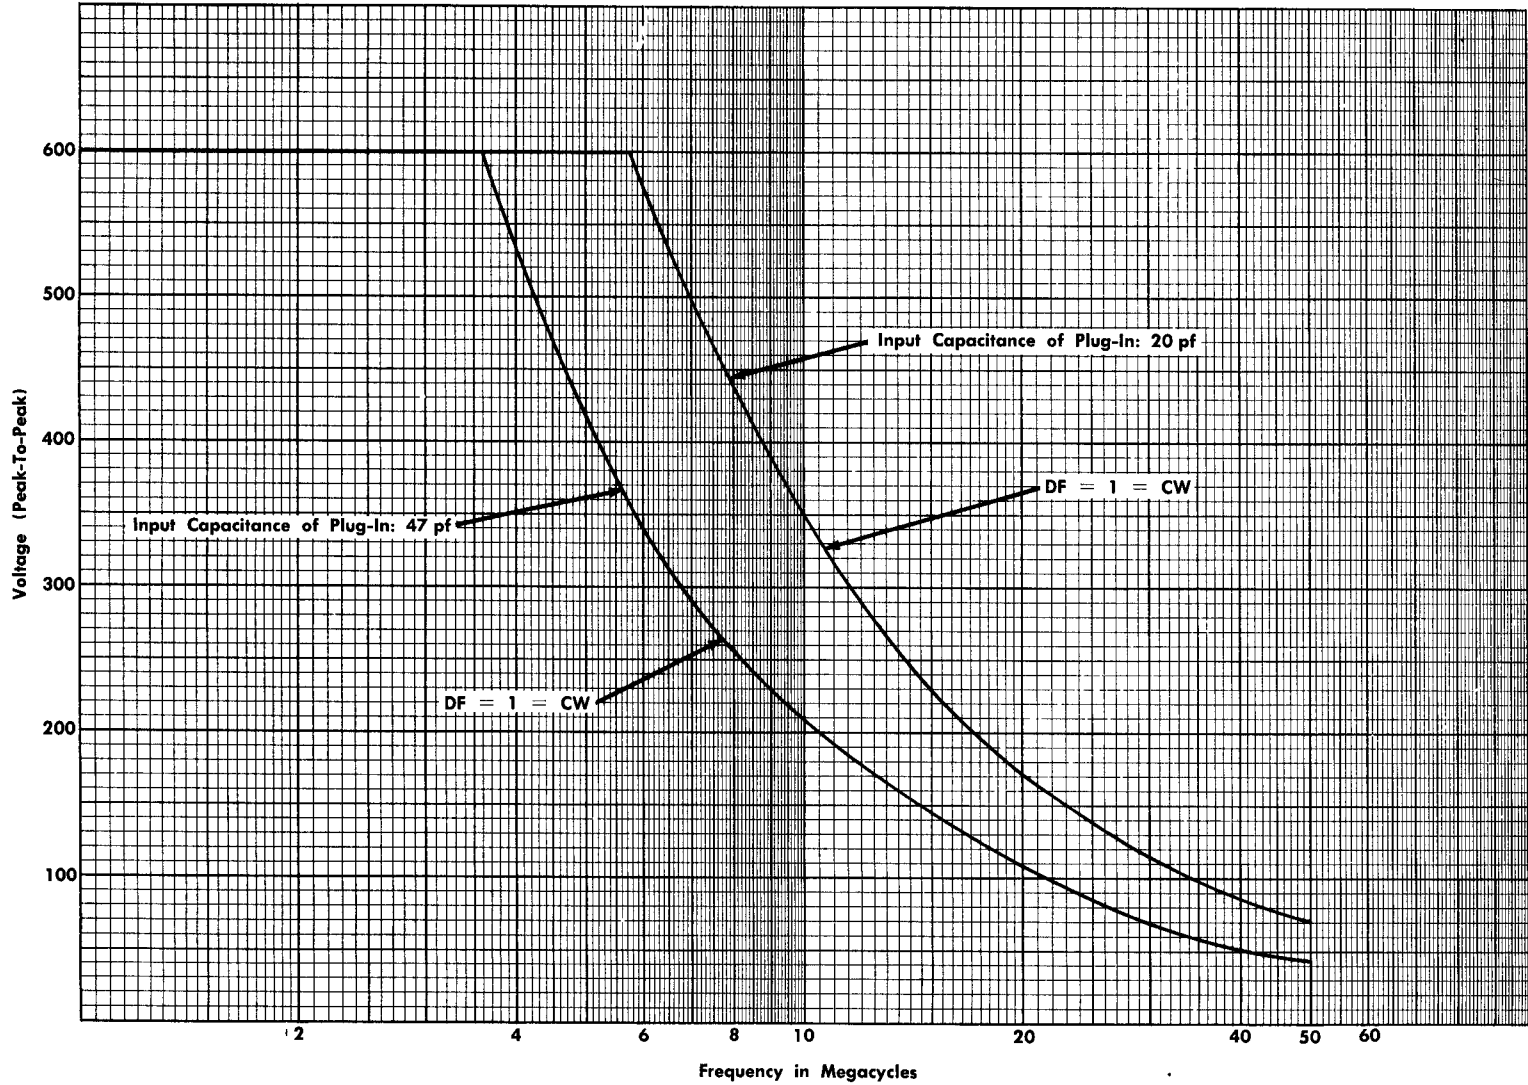


Fig. 2. P6006 derating curves (3.5-ft cable).

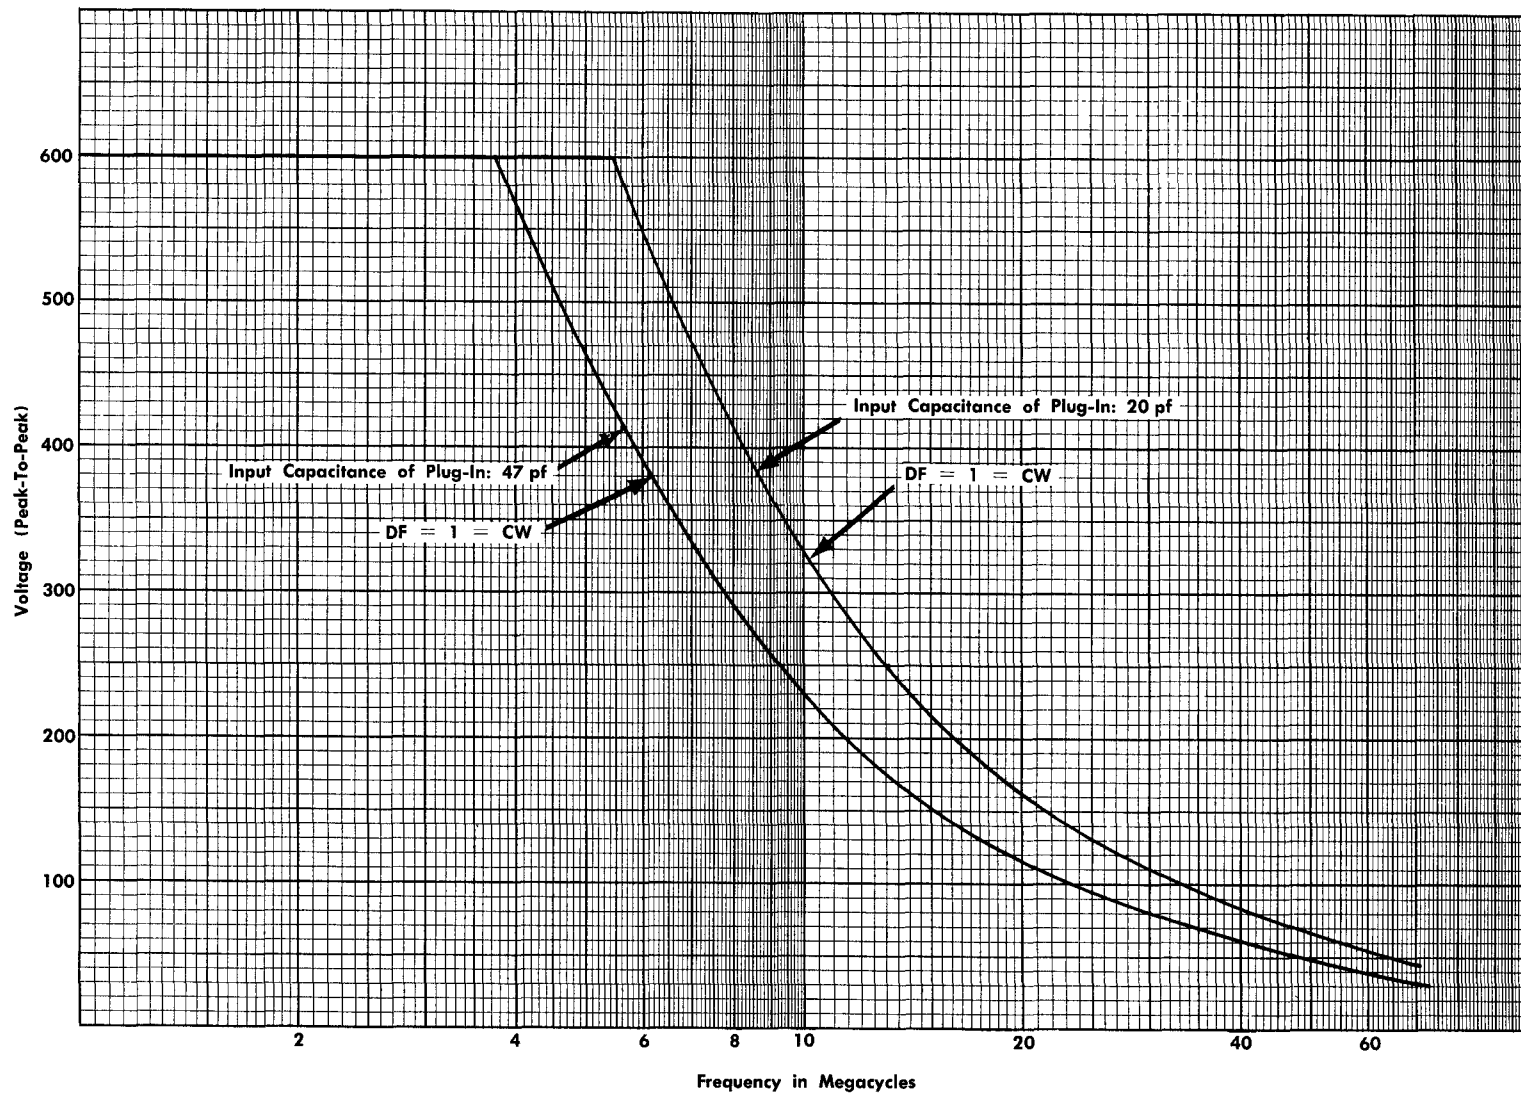


Fig. 3. P6006 derating curves (6-ft cable)

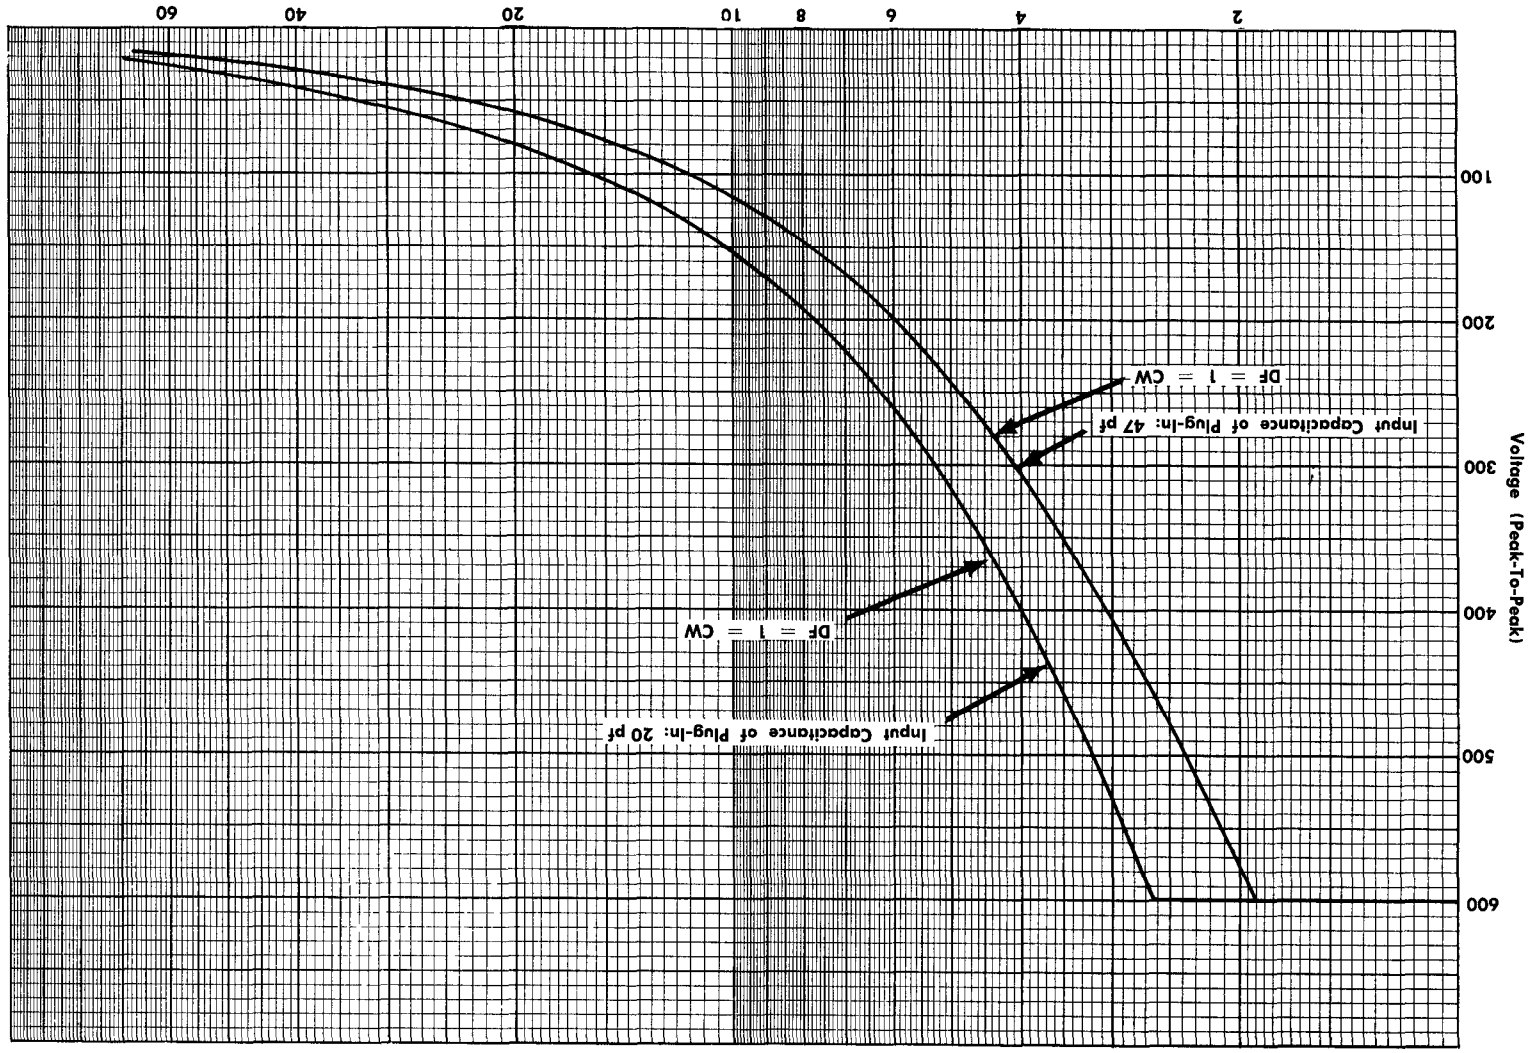


Fig. 4. P6006 derating curves (9-ft cable).

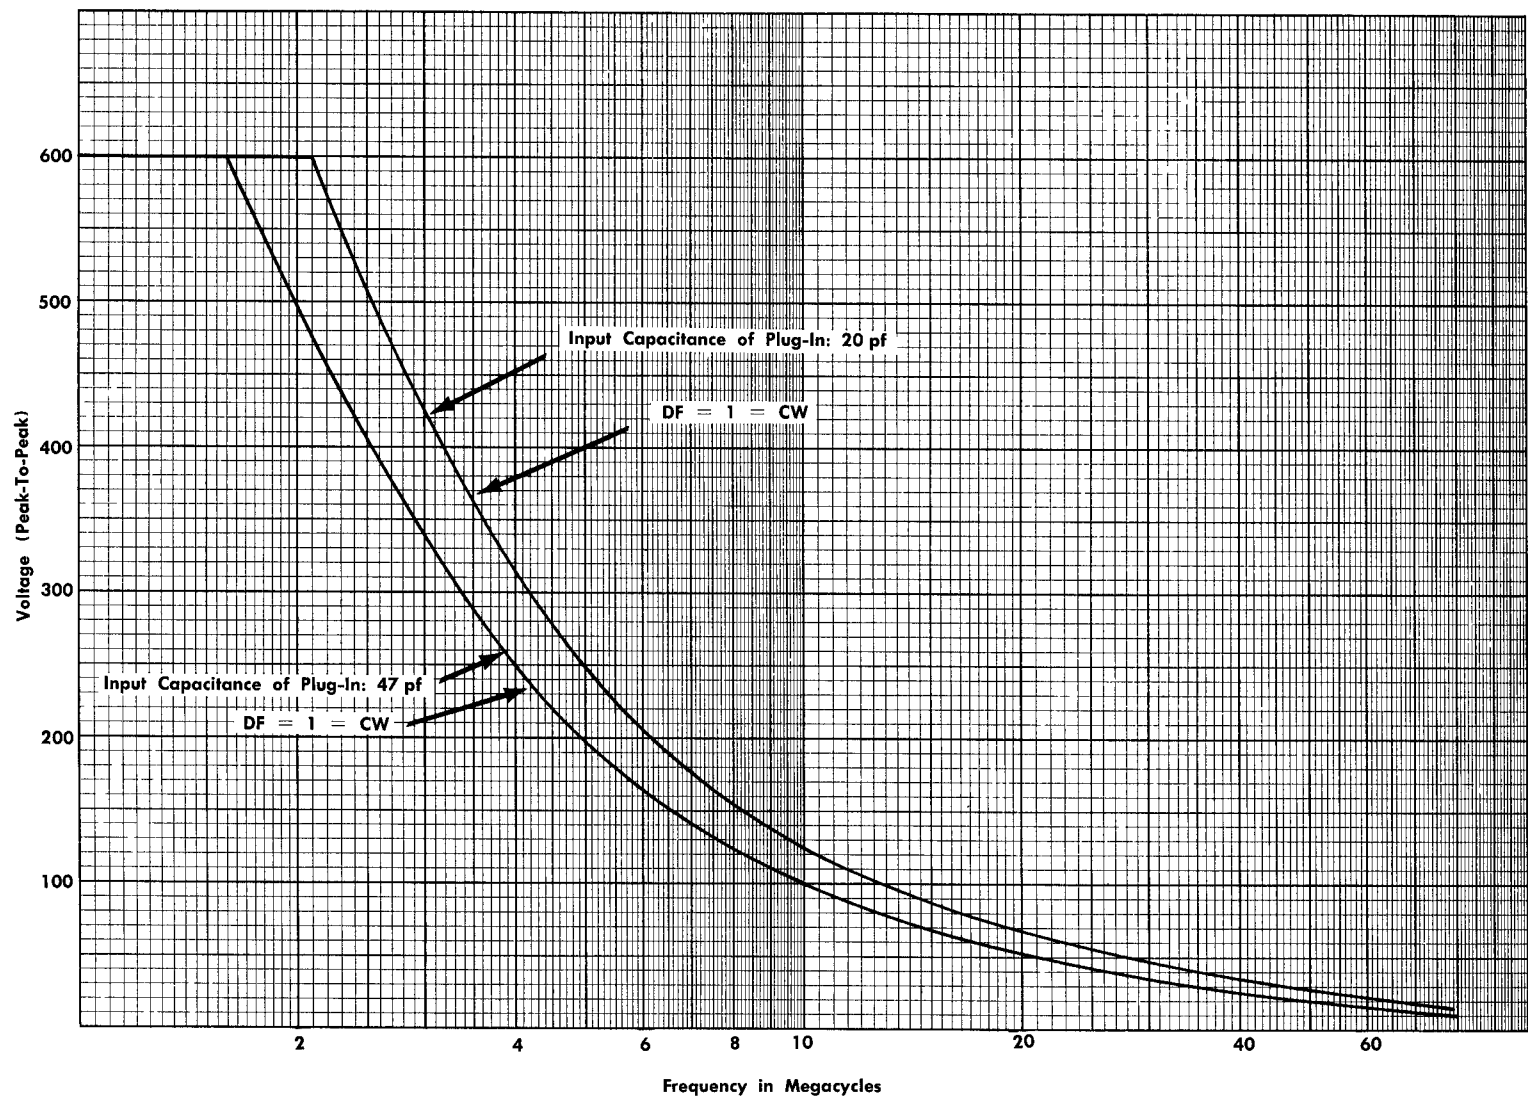


Fig. 5. P6006 derating curves (12-ft cable).

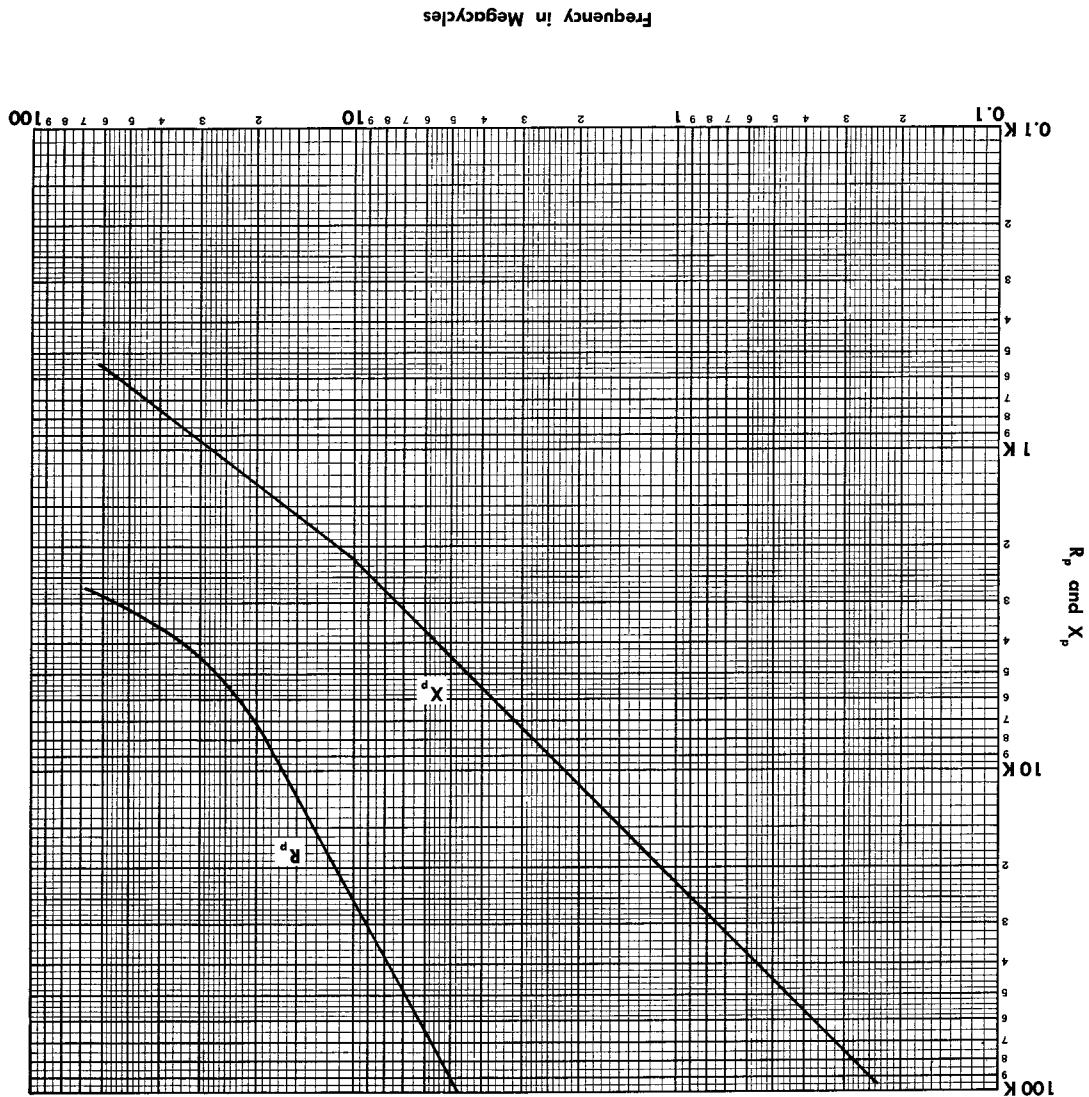


Fig. 6. P6006 input R_p and X_p vs frequency curves (3.5-ft cable).

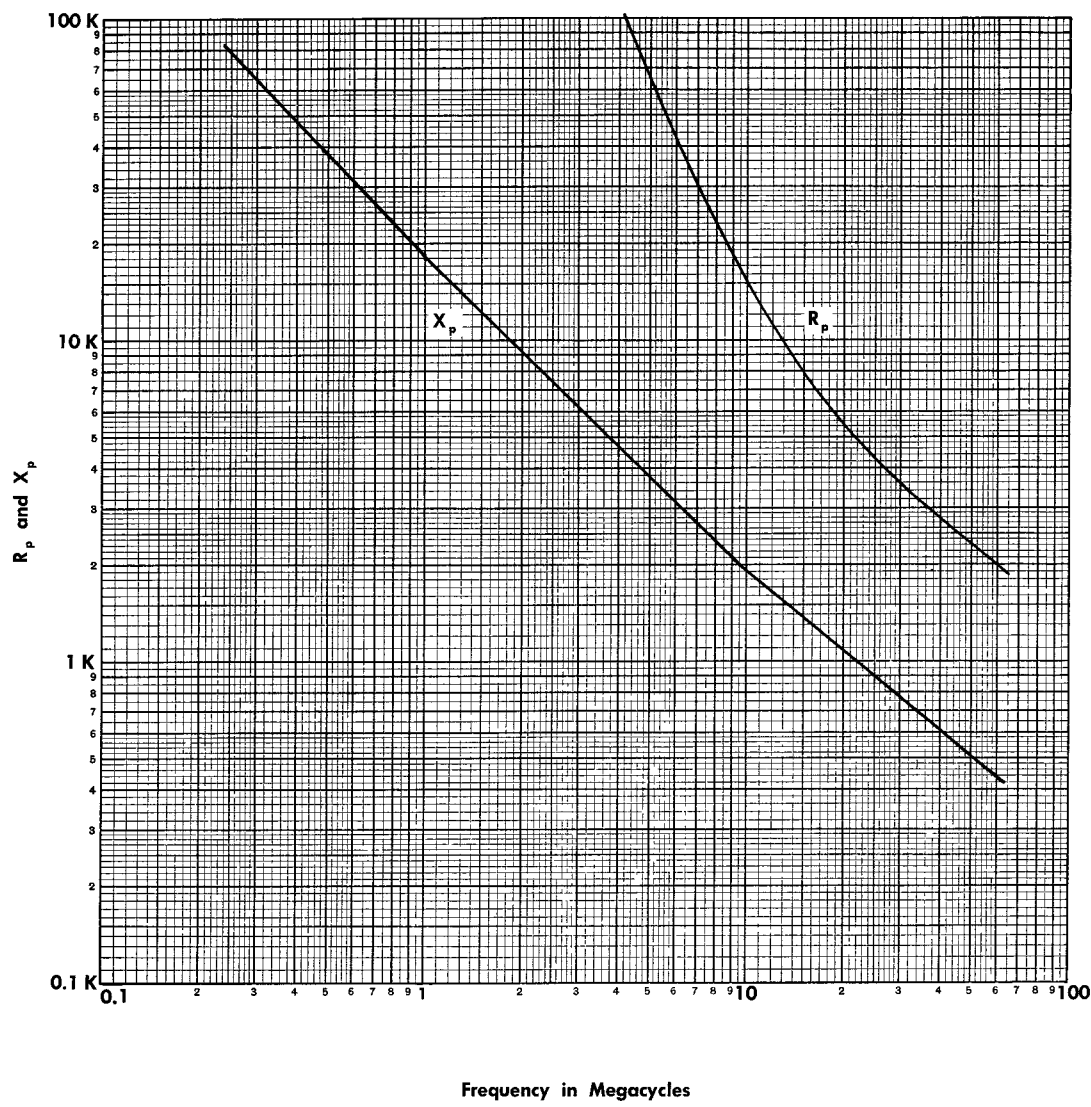


Fig. 7. P6006 input R_p and X_p vs frequency curves (6-ft cable).

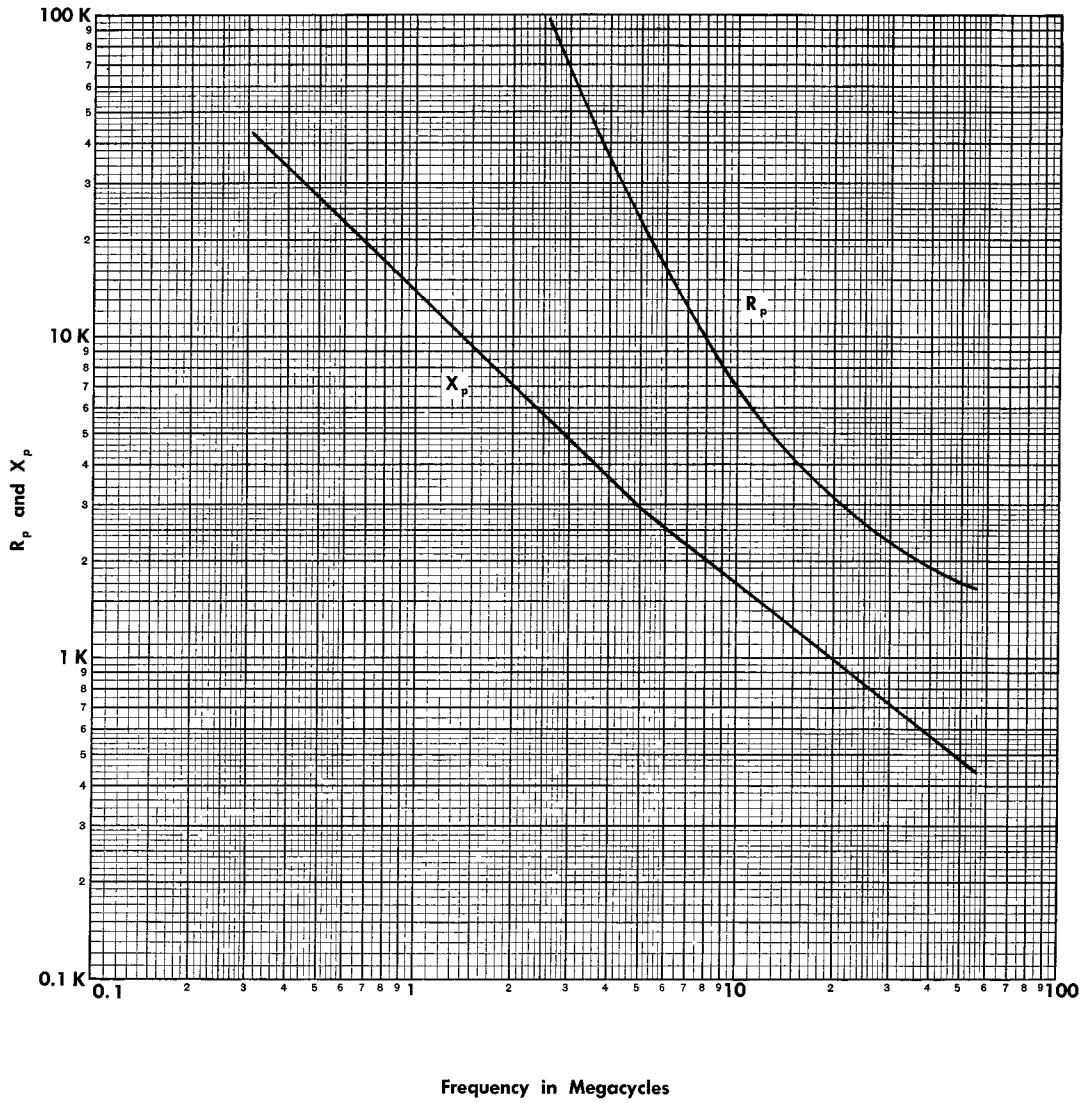


Fig. 8. P6006 input R_p and X_p vs frequency curves (9-ft cable).


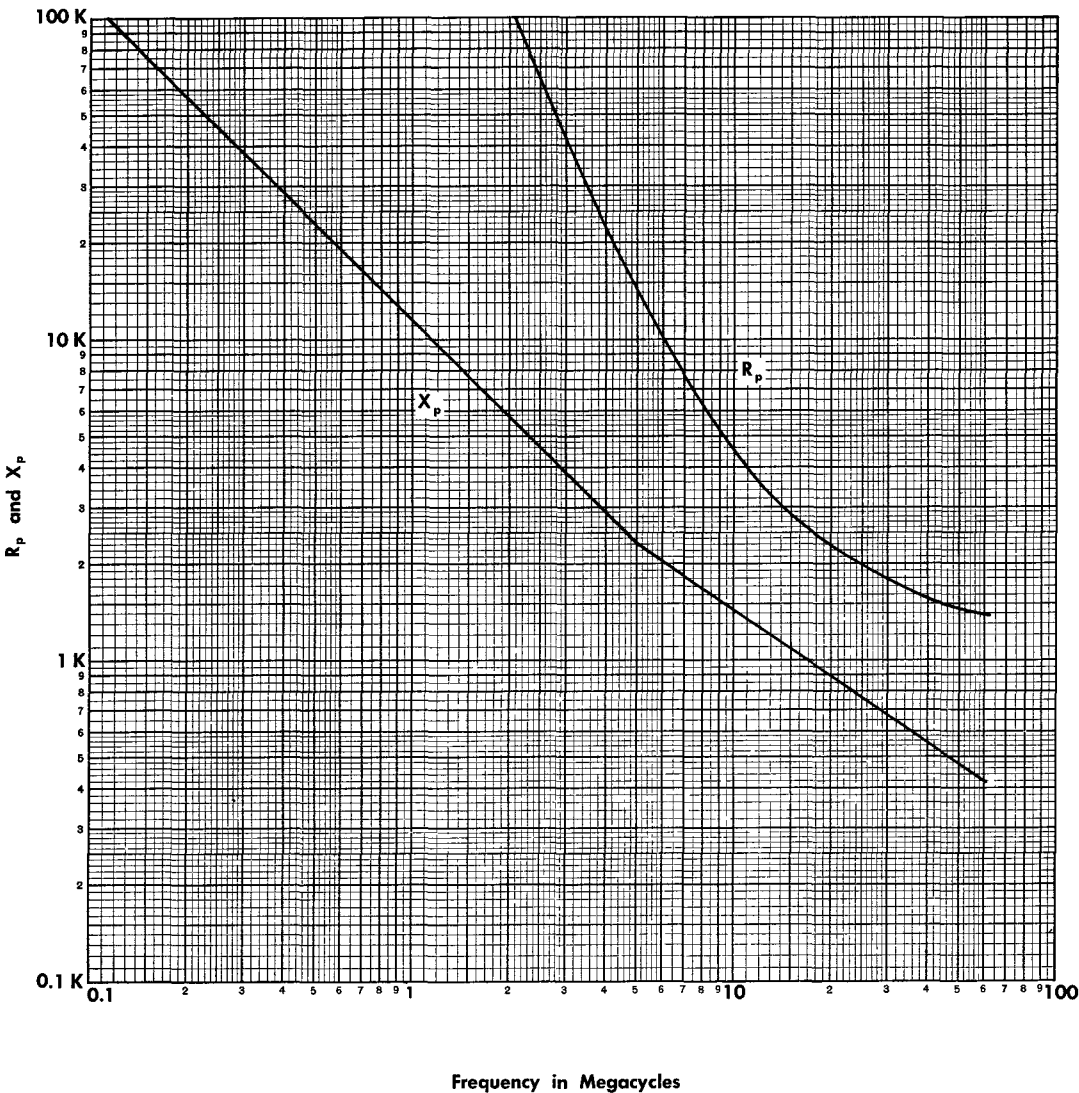



Fig. 9. P6006 input R_p and X_p vs frequency curves (12-ft cable).

PROBE WITH ACCESSORIES

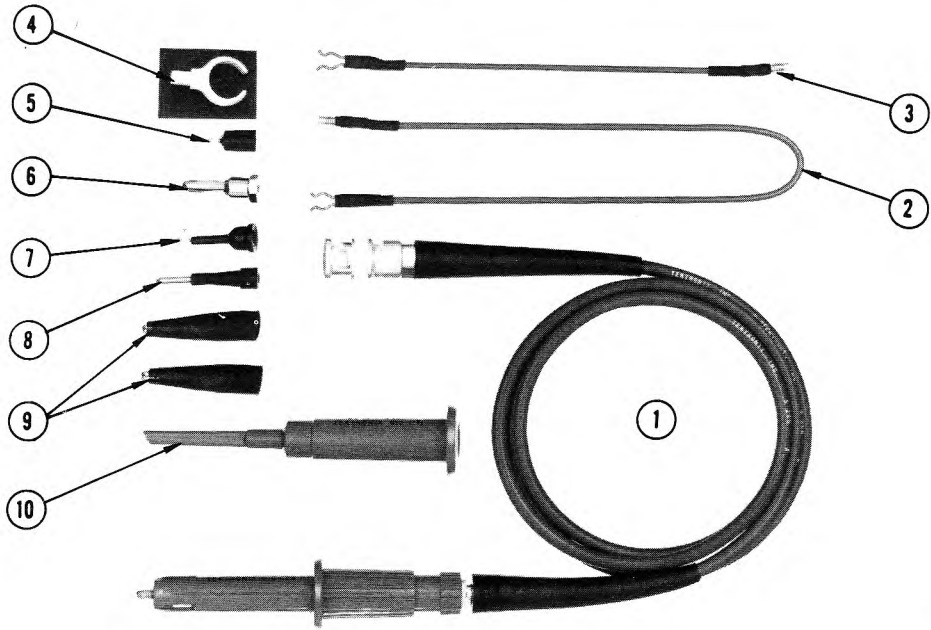


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.	Q T Y.	1	2	3	4	5	DESCRIPTION
PROBE PACKAGE									
1—10	010-0125-00								PROBE PACKAGE, P6006 (3.5 ft UHF)
	010-0127-00								PROBE PACKAGE, P6006 (3.5 ft BNC)
	010-0158-00								PROBE PACKAGE, P6006 (6 ft UHF)
	010-0160-00								PROBE PACKAGE, P6006 (6 ft BNC)
	010-0142-00								PROBE PACKAGE, P6006 (9 ft UHF)
	010-0146-00								PROBE PACKAGE, P6006 (9 ft BNC)
	010-0144-00								PROBE PACKAGE, P6006 (12 ft UHF)
	010-0148-00								PROBE PACKAGE, P6006 (12 ft BNC)
	- - - - -								probe package includes:
PROBE ONLY									
1	010-0126-00								PROBE, P6006 (3.5 ft UHF)
	010-0128-00								PROBE, P6006 (3.5 ft BNC)
	010-0159-00								PROBE, P6006 (6 ft UHF)
	010-0161-00								PROBE, P6006 (6 ft BNC)
	010-0143-00								PROBE, P6006 (9 ft UHF)
	010-0147-00								PROBE, P6006 (9 ft BNC)
	010-0145-00								PROBE, P6006 (12 ft UHF)
	010-0149-00								PROBE, P6006 (12 ft BNC)
STANDARD ACCESSORIES									
2	175-0125-00			1					CABLE, ground lead, 12 inches
3	175-0124-00			1					CABLE, ground lead, 5 inches
4	352-0068-00	352-0090-00		1					HOLDER, probe
5	206-0015-00			1					TIP, straight, BNC
6	134-0013-00			1					PLUG, banana
7	206-0105-00			1					TIP, probe, hook
8	206-0060-00			1					TIP, probe, spring
9	344-0046-00			2					CLIP, probe
10	013-0071-00			1					PINCHER TIP
	070-0381-00			1					MANUAL, instruction (not shown)

REPLACEABLE PARTS

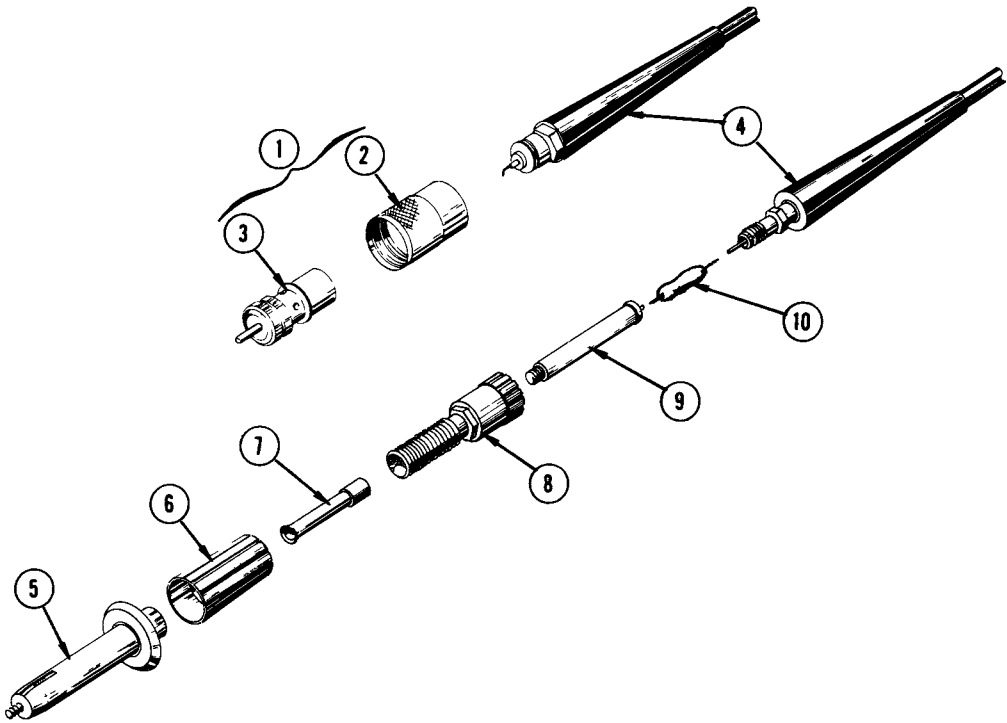


NO.	TEKTRONIX	SERIAL/MODEL NO.		Q	T	DESCRIPTION
		EFF.	DISC.			
REF.	PART NO.			Y.	1 2 3 4 5	
	010-0126-00			1		PROBE, P6006 (3.5 ft, UHF)
	- - - - -			-		probe includes:
1	131-0058-00			1		CONNECTOR, coaxial
	- - - - -			-		connector includes:
2	200-0026-00			1		COVER, connector
3	131-0196-00			1		CONNECTOR, male
4	175-0261-00			1		CABLE ASSEMBLY
5	204-0143-00			1		BODY ASSEMBLY
	- - - - -			-		body includes:
	- - - - -			1		RESISTOR (R1)
6	166-0285-00			1		SLEEVE, locking
7	166-0282-00			1		SLEEVE
8	358-0194-00			1		BUSHING, base
9	358-0192-00			1		BUSHING, inner base
10	301-0361-00			1		RESISTOR, 360 Ω , 1/2 W, 5% (R2)

REPLACEABLE PARTS

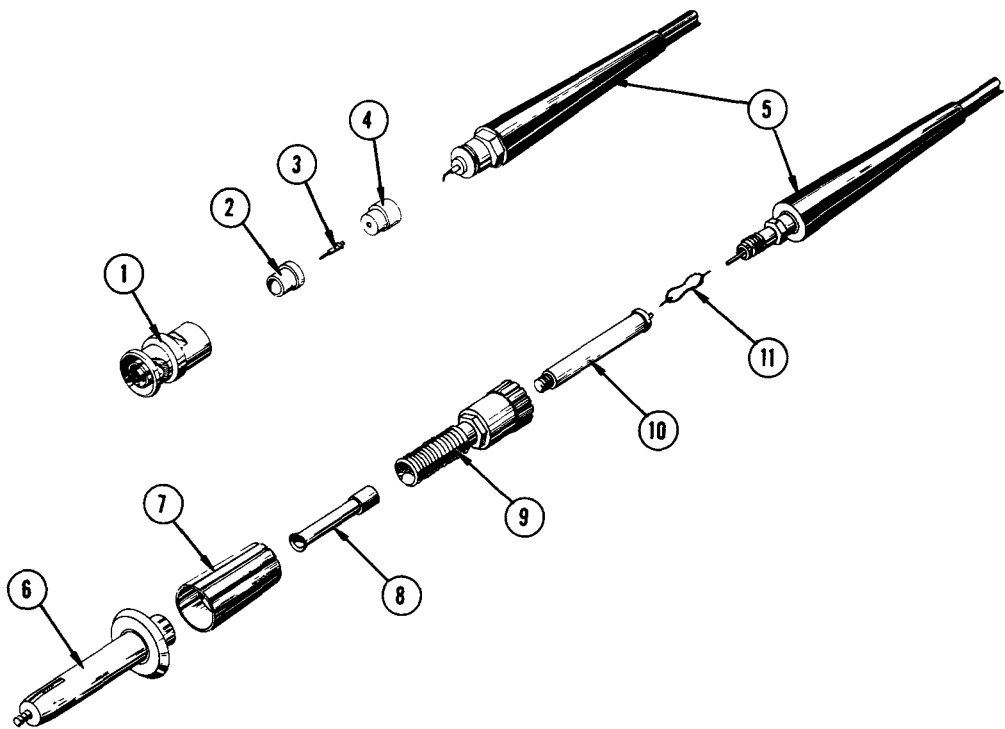


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	010-0128-00			1	PROBE, P6006, (3.5 ft., BNC)
	- - - - -			-	probe includes:
1	134-0044-00			1	PLUG, probe
2	358-0072-00			1	BUSHING, insulator
3	214-0109-00			1	PIN, probe contact
4	361-0022-00			1	SPACER, with center hole
5	175-0272-00			1	CABLE ASSEMBLY
6	204-0142-00			1	BODY ASSEMBLY
	- - - - -			-	body includes:
	- - - - -			1	RESISTOR (R1)
7	166-0285-00			1	SLEEVE, locking
8	166-0282-00			1	SLEEVE
9	358-0194-00			1	BUSHING, base
10	358-0192-00			1	BUSHING, inner base
11	301-0361-00			1	RESISTOR, 360 Ω , 1/2 W, 5% (R2)

REPLACEABLE PARTS

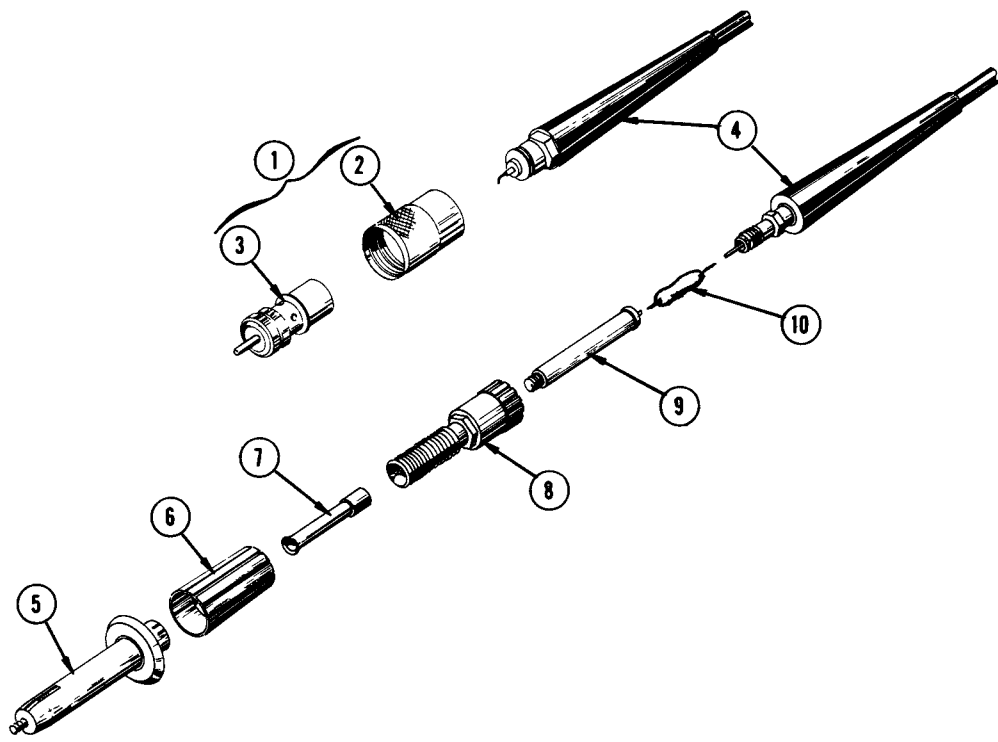


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	010-0159-00			1	PROBE, P6006 (6 ft, UHF)
	- - - - -			-	probe includes:
1	131-0058-00			1	CONNECTOR, coaxial
	- - - - -			-	connector includes:
2	200-0026-00			1	COVER, connector
3	131-0196-00			1	CONNECTOR, male
4	175-0278-00			1	CABLE ASSEMBLY
5	204-0182-00			1	BODY ASSEMBLY
	- - - - -			-	body includes:
	- - - - -			1	RESISTOR (R1)
6	166-0285-00			1	SLEEVE, locking
7	166-0282-00			1	SLEEVE
8	358-0194-00			1	BUSHING, base
9	358-0192-00			1	BUSHING, inner base
10	302-0181-00			1	RESISTOR, 180 Ω , $\frac{1}{2}$ W, 10% (R2)

REPLACEABLE PARTS

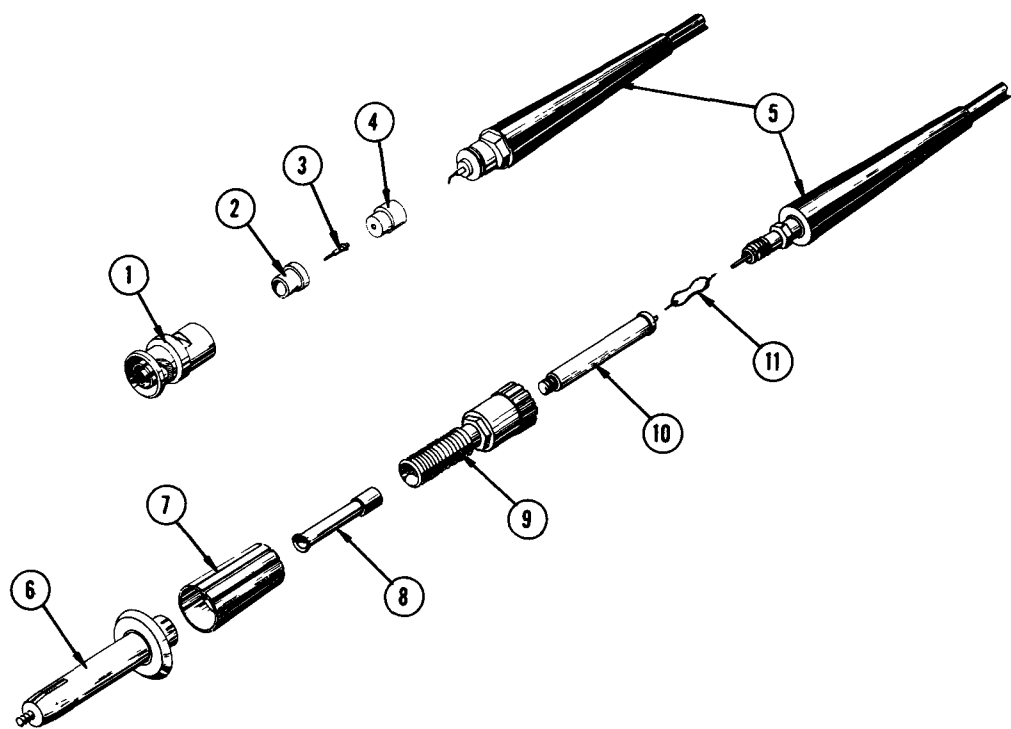


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		Q T Y.	DESCRIPTION
		EFF.	DISC.		
	010-0161-00			1	PROBE, P6006, (6 ft, BNC)
	- - - - -			-	probe includes:
1	134-0044-00			1	PLUG, probe
2	358-0072-00			1	BUSHING, insulator
3	214-0109-00			1	PIN, probe contact
4	361-0022-00			1	SPACER, with center hole
5	175-0279-00			1	CABLE ASSEMBLY
6	204-0185 00			1	BODY ASSEMBLY
	- - - - -			-	body includes:
	- - - - -			1	RESISTOR (R1)
7	166-0285-00			1	SLEEVE, locking
8	166-0282-00			1	SLEEVE
9	358-0194-00			1	BUSHING, base
10	358-0192-00			1	BUSHING, inner base
11	302-0181-00			1	RESISTOR, 180 Ω, 1/2 W, 10% (R2)

REPLACEABLE PARTS

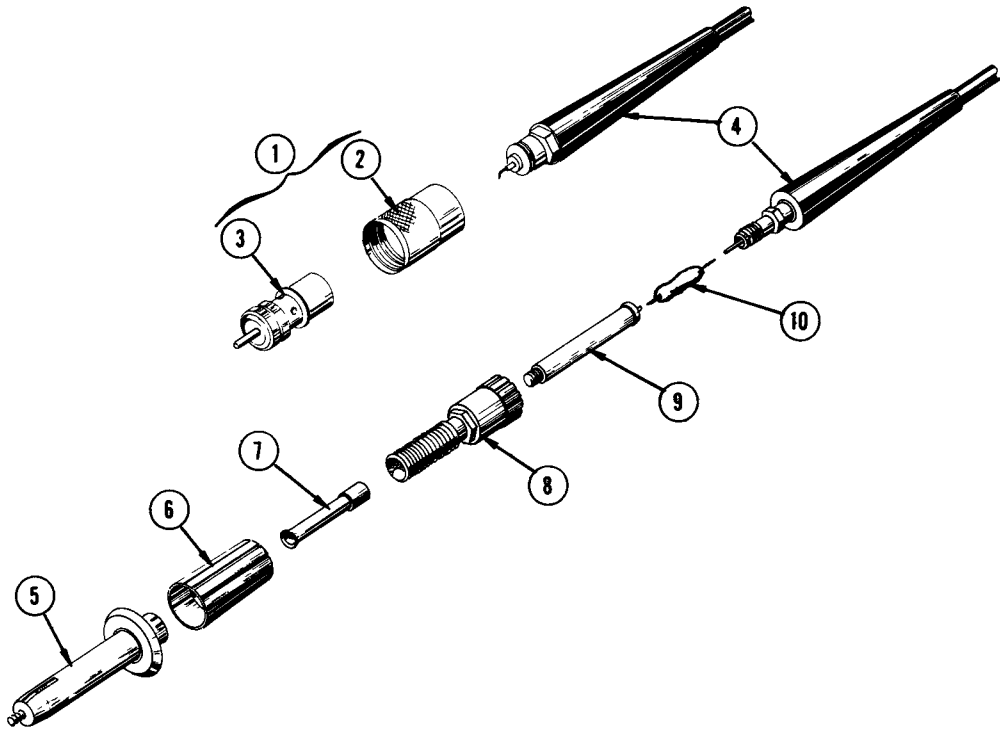


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	010-0143-00			1	PROBE, P6006, (9 ft, UHF)
	- - - - -			-	probe includes:
1	131-0058-00			1	CONNECTOR, coaxial
	- - - - -			-	connector includes:
2	200-0026-00			1	COVER, connector
3	131-0196-00			1	CONNECTOR, male
	108-0262-00			1	COIL, 0.6 μ H (L1, not shown)
4	175-0266-00			1	CABLE ASSEMBLY
5	204-0183-00			1	BODY, ASSEMBLY
	- - - - -			-	body includes:
	- - - - -			1	RESISTOR (R1)
6	166-0285-00			1	SLEEVE, locking
7	166-0282-00			1	SLEEVE
8	358-0194-00			1	BUSHING, base
9	358-0192-00			1	BUSHING, inner base
10	301-0431-00			1	RESISTOR, 430 Ω , 1/2 W, 5% (R2)

REPLACEABLE PARTS

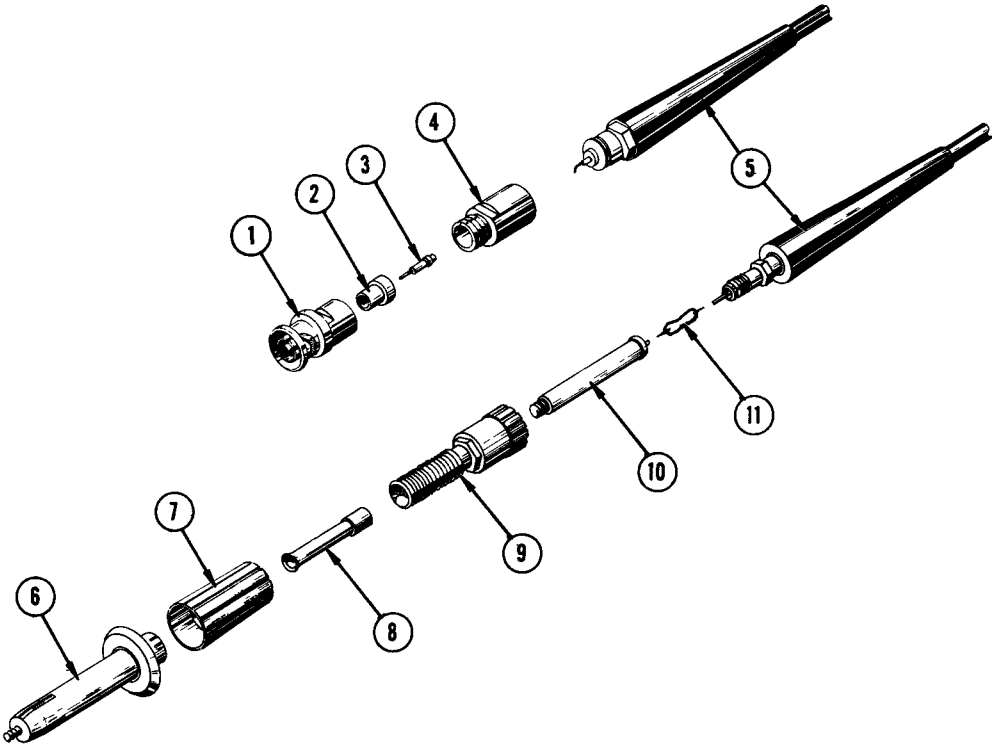


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		Q T Y.	1	2	3	4	5	DESCRIPTION
		EFF.	DISC.							
	010-0147-00			1						PROBE, P6006, (9 ft, BNC)
	- - - - -			-						probe includes:
1	134-0044-00			1						PLUG, probe
2	358-0072-00			1						BUSHING, insulator
3	214-0109-00			1						PIN, probe contact
4	131-0270-00			1						CONNECTOR, adapter
	166-0326-00			1						SLEEVE, adapter (not shown)
	108-0262-00			1						COIL, 0.6 μ H (L1, not shown)
5	175-0280-00			1						CABLE ASSEMBLY
6	204-0186-00			1						BODY ASSEMBLY
	- - - - -			-						body includes:
	- - - - -			1						RESISTOR (R1)
7	166-0285-00			1						SLEEVE, locking
8	166-0282-00			1						SLEEVE
9	358-0194-00			1						BUSHING, base
10	358-0192-00			1						BUSHING, inner base
11	301-0431-00			1						RESISTOR, 430 Ω , 1/2 W, 5% (R2)

REPLACEABLE PARTS

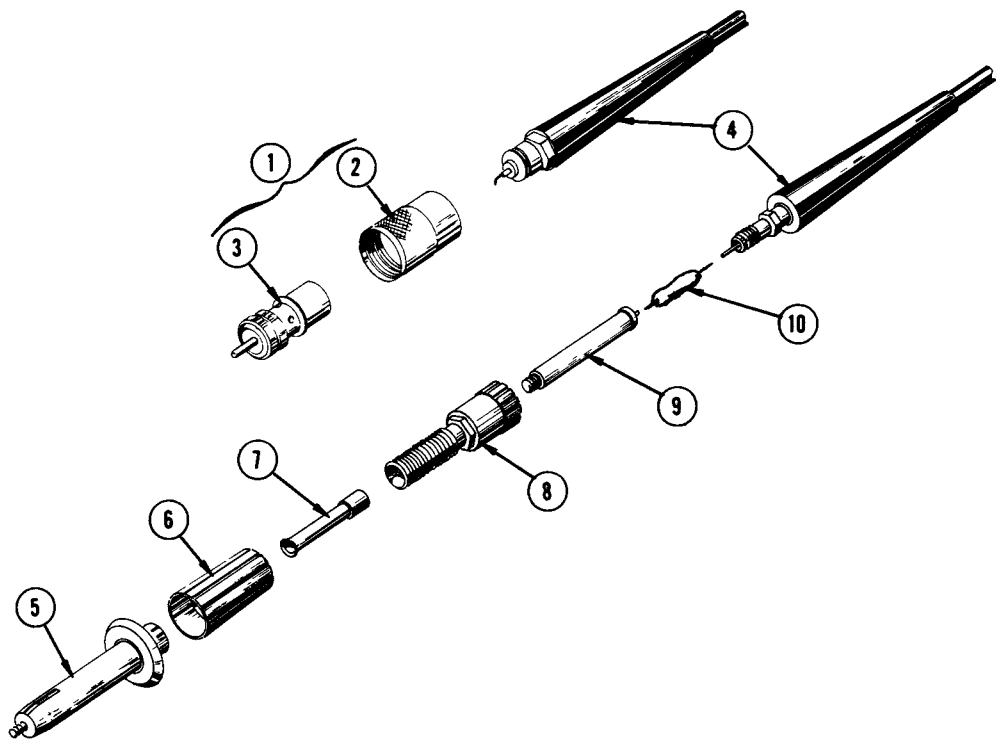


REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	010-0145-00				PROBE, P6006, (12 ft, UHF)
	- - - - -			-	probe includes:
1	131-0058-00			1	CONNECTOR, coaxial
	- - - - -			-	connector includes
2	200-0026-00			1	COVER, connector
3	131-0196-00			1	CONNECTOR, male
4	175-0267-00			1	CABLE ASSEMBLY
5	204-0184-00			1	BODY ASSEMBLY, (w/resistor)
6	166-0285-00			1	SLEEVE, locking
7	166-0340-00			1	SLEEVE
8	358-0194-00			1	BUSHING, base
9	358-0192-00			1	BUSHING, inner base
10	301-0361-00			1	RESISTOR, 360 Ω , 1/2 W, 5% (R2)

REPLACEABLE PARTS

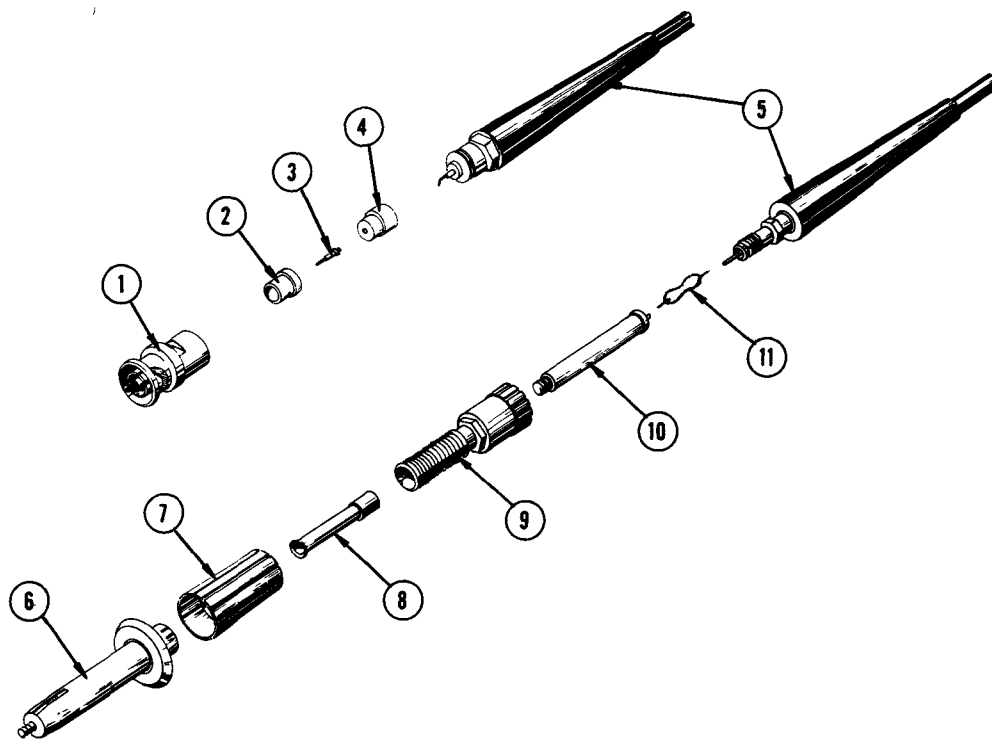

REF. NO.	TEKTRONIX PART NO.	SERIAL/MODEL NO.		Q T Y.	1	2	3	4	5	DESCRIPTION
		EFF.	DISC.							
	010-0149-00			1						PROBE, P6006 (12 ft, BNC)
	- - - - -			-						probe includes
1	134-0044-00			1						PLUG, probe
2	358-0072-00			1						BUSHING, insulator
3	214-0109-00			1						PIN, probe contact
4	361-0022-00			1						SPACER, with center hole
5	175-0281-00			1						CABLE ASSEMBLY
6	204-0187-00			1						BODY ASSEMBLY (w/resistor)
7	166-0285-00			1						SLEEVE, locking
8	166-0340-00			1						SLEEVE
9	358-0194-00			1						BUSHING, base
10	358-0192-00			1						BUSHING, inner base
11	301-0361-00			1						RESISTOR, 360 Ω , 1/2 W, 5% (R2)

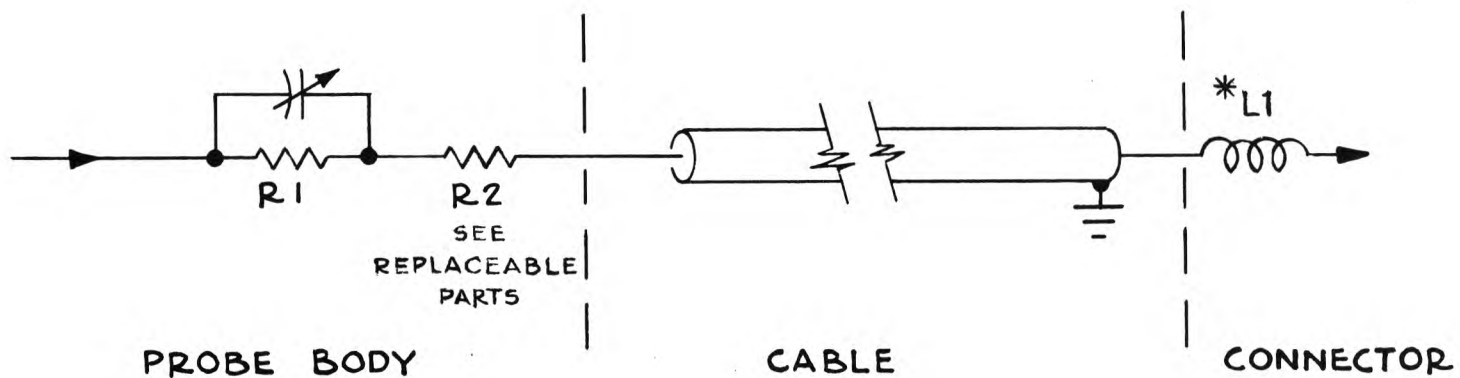

P6006 PROBE

363
R

*9' CABLE ONLY